



OSS
ONE STOP SYSTEMS

Unified Baseboard Management System Manager and Programming Guide

February 2023

Table of Contents

Managing U-BMC Systems.....	7
Managing the system with the OSS U-BMC Graphical User Interface (GUI).....	7
Getting Started	7
Ethernet Network Connectivity.....	7
Power ON/OFF	8
Operating System Installation	8
Browser support	8
Logging in to the GUI	9
Session Count.....	10
Session timeout.....	10
Role-based Authorization	10
Dashboard.....	11
PCIe Ports	12
Console.....	13
GUI Navigation.....	13
Footer.....	14
Table controls	14
Sensor Readings.....	15
Device Tree	16
Event Log	17
Clearing the Event Log.....	17
Settings Overview	18
Time Settings	19
Date and Time	19
Time Zone.....	19
NTP Server.....	20
Network Settings	21
Dynamic Host Configuration (DHCP)	21
Static IP Address.....	22
Save Ethernet Configuration Changes.....	22
Hostname and Domain Name	22
Fan Settings	23
System Services	24
SSH, IPMI and KVMIP Services.....	24
Users.....	25
Add Users.....	25

Edit Users	26
Delete Users	26
Terminate User Session.....	26
Event Service	27
Adding Email Subscribers	27
Removing Email Subscribers	28
Configuring an SMTP Relay Server	28
Configuring Redfish HTTP Subscribers.....	28
System Power and Reset	29
Theme	30
U-BMC Reset.....	30
Locator LED	31
Audit Log.....	32
Software Update.....	32
Software Update from File Upload.....	33
Software Update from Site.....	34
Factory Reset	34
Service Report.....	35
Create Service Report.....	35
Managing the system with the OSS U-BMC Command Line Interface (CLI).....	37
CLI Overview	37
Connecting to the CLI.....	37
Secure Shell (SSH).....	37
USB Serial	38
Serial Port Location.....	38
Serial Connection Settings	38
Role-based Authorization	39
User Authorized Privileges	39
Editing the Command Line.....	39
Entering Commands	39
Tab Completion	40
Repeating Commands	41
Keyboard Shortcuts	41
Common Commands	42
Command "cd"	42
Command "cls".....	42
Command "exit"	42
Command "health".....	43

Command "help"	43
Command "quit"	43
Command Line Namespaces	44
Namespace "auditlog"	44
Clear Log Entries	44
Get Detail	45
List	45
Namespace "bmc"	45
Discover	46
Firmware Update	46
List	47
Reset Power	47
Reset Factory Default	47
Update U-BMC Settings	47
KVMIP	47
SSH	47
IPMI	48
HTTP	48
NTP	48
Date and Time	48
Hostname	49
FQDN (Fully Qualified Domain Name)	49
Time Zone	49
Namespace "chassis"	49
List	50
Chassis Power	50
Namespace "eventlog"	51
Clear Log Entries	51
Get Detail	51
List	51
Namespace "event_service"	52
Event Service Settings	52
Test Event Service	53
Update Event Service Settings	53
SMTP Service State	53
SMTP Username	53
SMTP Password	53
SMTP Server Address	53

SMTP Server Port	54
SMTP From Address	54
SMTP Connection Protocol	54
SMTP Authentication Protocol	54
Namespace "event_subscriptions"	54
Create Event Subscription	55
Delete Subscription	56
List	56
Namespace "fans"	56
Fan Speed Control	57
Get Detail	57
List	57
Namespace "interfaces"	57
Disable Interface	58
Get Detail	58
List	58
Update Ethernet Interface	58
DHCP Address	59
Static IPv4 Address	59
Gateway	59
DNS Server	59
MTU Size	59
Namespace "pcie"	60
List	60
Namespace "psus"	61
Get Detail	61
List	61
Namespace "servicereport"	61
Create Service Report	62
Delete Service Report	62
List	62
Namespace "systems"	62
List	63
Power State	64
Namespace "terminal"	64
Basic ANSI	64
Basic xterm	65
Full Color	65

List	65
Save	65
Table Alt Color	65
Namespace "thermals"	66
Get Detail	66
List	67
Namespace "users"	67
Add User	67
Delete User	68
List	68
Update User	68
Role Change	68
Password Change	69
Rename User	69
Namespace "voltages"	69
Get Details	70
List	70
Managing the system with the OSS U-BMC Redfish API	71
Managing the system with the OSS U-BMC Intelligent Platform Management Interface (IPMI)	72
IPMI Commands	72
power status	72
power on	72
power off	72
power cycle	72
power reset	73
power soft	73
sdr	73
sensor	73
lan print	73
lan print 2	74
Glossary	74

Managing U-BMC Systems

One Stop Systems (OSS) solutions use a Unified Baseboard Management (U-BMC) controller for system management, monitoring, and maintenance. The U-BMC resides on the backplane and operates as a self-contained system that monitors sensors and the physical state of the system. The U-BMC provides access to system administrators to view the event logs or subscribe to event services to receive notifications and resolve issues.

The U-BMC provides a web-based monitoring tool in a Graphical User Interface (GUI) that can be accessed from a mobile or desktop browser with network connectivity to the U-BMC. The U-BMC provides a Command Line Interface (CLI) to allow remote connections from a system administration console or terminal application. The U-BMC primarily uses the Redfish API (Application Program Interface) for programmatic, remote communication; however, the U-BMC accepts Intelligent Platform Management Interface (IPMI) commands as a fallback to programmatic access.

See the following sections in this document for more information about how to use the U-BMC:

- [Managing the system with the OSS U-BMC Graphical User Interface \(GUI\)](#)
- [Managing the system with the OSS U-BMC Command Line Interface \(CLI\)](#)
- [Managing the system with the OSS U-BMC Redfish API](#)
- [Managing the system with the OSS U-BMC Intelligent Platform Management Interface \(IPMI\)](#)

Managing the system with the OSS U-BMC Graphical User Interface (GUI)

The U-BMC provides a web-based monitoring tool in a Graphical User Interface (GUI) that can be accessed from a mobile or desktop browser with network connectivity to the U-BMC.

The following sections describe the GUI in detail. It is assumed that you have already set up the network connection and can connect with a supported browser.

Getting Started

These sections will assist you in getting up and running with the U-BMC GUI, getting connected to the U-BMC, and performing basic power operations. These topics will be covered in more detail later.

Ethernet Network Connectivity

To take advantage of the management functions of the U-BMC GUI and CLI, you can connect the U-BMC to an Ethernet network. The U-BMC is capable of supporting multiple network

interfaces. You have the option to configure the **LAN 1** interface with either DHCP or a static IP address. By default, the LAN 1 interface is configured to use DHCP. When you connect the U-BMC to a network with DHCP enabled, the U-BMC will be automatically assigned an IP address. You can locate the U-BMC on the network using the default hostname "UBMC" or through the IP address assigned by DHCP.

The **LAN 2** Ethernet port on the system uses a fixed static IP address of **10.119.119.1/24**, which cannot be modified. This port is best suited for a dedicated management network connection to the U-BMC from a system in a standalone environment, such as a lab or a test bench, where the system is not connected to a network with DHCP enabled.

Power ON/OFF

The U-BMC GUI offers a straightforward method to power on or off the system. You can perform power operations using the **System Power and Reset** page, which is found under the **Settings** section in the top navigation.

A **short press** of the power button will turn on the system and issue a graceful shutdown request to the operating system when pressed again. However, a **long press** of the power button will shut down the system immediately, but this carries the risk of potential data loss.

Operating System Installation

You can access the operating system installation process via the **Console** link located on the **Dashboard** page of the U-BMC GUI. Clicking this link will launch a new browser tab that connects to the U-BMC's internal system motherboard console. To access the programs used for operating system installation or perform other **Image Redirection** operations, you will need to enter the same login credentials used for the U-BMC GUI. Once logged in, you can locate the **Remote Control** page and use it to mount the installation media.

For additional guidance, please refer to the documentation for the internal system's motherboard.

Browser support

OSS supports most recent browser versions. This includes the following specific versions:

Browser	Supported Versions
Chrome	Latest
Firefox	Latest and extended support release
Edge	2 most recent major versions
Safari	2 most recent major versions
iOS	2 most recent major versions
Android	2 most recent major versions

Logging in to the GUI


Connecting to the U-BMC GUI requires the following:

- The computer has a supported web browser installed.
- The computer has an IP address on a network with the U-BMC so that they can reach each other.
- The user has a username and password linked to an account on the U-BMC.

The username and password are both set to **admin** by default.

NOTE: Consider changing the default administrator password to ensure that the U-BMC is not using a well-known password. If you forget your account password, you can connect to the serial port and factory reset the U-BMC by logging in with the username "reset" and the password "reset".

In the browser address bar, type the URL of the U-BMC that you want to connect to, for example, **10.10.10.16**. You will be greeted with the login page where you enter your **User Name** and **Password**. Click **Log In**.



Unified Baseboard Management

User Name

Password

LOG IN

Support Request Form
Toll Free: +1 (877) 438-2724
Local: +1 (760) 745-9883



Session Count

Only one user can be logged in to a particular user account at a time. You cannot share your user account with multiple browsers at the same time. If you are logged in to the U-BMC's GUI and you try to log in to the U-BMC's GUI from another browser, the first browser will be logged out.

You can open multiple tabs in the same browser, but you may experience performance degradation if you have too many tabs open to the U-BMC or too many users logged in to the U-BMC GUI.

Session timeout

Session timeout is the amount of time that a user can be logged in to the U-BMC GUI without any activity. If the user is inactive for the specified amount of time, the user is automatically logged out of the U-BMC GUI. The default session timeout is 30 minutes. You cannot change the session timeout.

While your browser is open, you can continue to use the U-BMC GUI without being logged out. If you close your browser without logging out, you will be logged out of the U-BMC GUI after the session timeout period.

Role-based Authorization

The GUI allows read-only users, operators, and administrators to login, and their privilege role authorizes them to see some pages and execute some commands. There are three authorization privilege roles: **User**, **Operator**, and **Administrator**.

- **User Role**
 - System components are read-only.
 - Can change their own password.
- **Operator Role**
 - It has all the permissions of a **User**.
 - System configuration changes are allowed.
 - Operator role users are not allowed to make changes to other users.
 - Operator role users are not allowed to reset to factory default settings.
- **Administrator Role**
 - All permissions to change system components.
 - Only administrators can create/delete users or change usernames.
 - Administrator role users can reset to factory default settings.

Dashboard

The dashboard provides an overview of the system settings, various system attributes, readings from physical sensors, and summarizes server health. Once the system is configured, this page will show essential information about system health and is the main page you will use to monitor it.

You can click on the links in the **System Health** section to find more information about the physical sensors. The **Quick Tasks** section links you directly to the settings page where you can change the settings for the **Locator LED** and the **System Power State**. The **Quick Links** section contains links that take you directly to the page where you can monitor the system **Console**, or to where you can view **All Sensors** in a single page.

The dashboard features a top navigation bar with the OSS U-BMC logo and several menu items: Dashboard, System Summary, Settings, Maintenance, Event Log (49), and Log Out. The main content area is divided into three primary sections:

- System Health:** Displays a 100% (6/6) status with a list of sensors and their counts: Fan Sensors (12 OK), GPU PCIe Health (4 OK), GPU Temperature Sensors (4 OK), Power Supplies (4 OK), Temperature Sensors (Other) (27 OK), and Voltage Sensors (35 OK).
- Quick Tasks:** Includes status indicators for 'Locator LED State: Off' and 'System Power State: On'.
- System Summary:** Provides detailed system information in a table format:

Model	Rigel
Manufacturer	One Stop Systems
Version	1.0.0-954
Serial Number	0005257c2234
Host Name	i-rigel3 192.168.1.240

Below the table, the **GPUs** section shows 'All Health Checks: 8 OK' and four individual GPU status cards:


 - GPU 1:** x16 PCIe Gen4, Temperature 35 C
 - GPU 2:** x16 PCIe Gen4, Temperature 35 C
 - GPU 3:** x16 PCIe Gen4, Temperature 34 C
 - GPU 4:** x16 PCIe Gen4, Temperature 32 C

The footer contains the copyright notice 'OSS U-BMC © 2023 One Stop Systems, Inc.', a status bar with 'Power', 'Health', and 'Locator' indicators, and an 'About' link.

PCIe Ports

The **PCIe Ports** section shows the status of the PCIe ports on the system. The PCIe ports are labeled with the port number, link speed and link width. The status of the PCIe port is shown in the icon. The status can be one of the following:

- **OK** - The PCIe port is connected and operating normally. A filled circle indicates that the link width is equal to the maximum.
- **Underutilized** - The PCIe port is connected, but the link width is less than the maximum. An empty circle indicates that the link width is less than the maximum.
- **Not Active** - The PCIe port is not connected to a device.
- **Off** - The chassis power is off.

 **OSS U-BMC**

DashboardSystem SummarySettingsMaintenance

Event LogLog Out

System Health
100% (5/5)

- Fan Sensors 3 OK
- PCIe Port Health 12 OK
- Power Supplies 1 OK
- Temperature Sensors 6 OK
- Voltage Sensors 5 OK

System Summary

Model	Test model
Manufacturer	One Stop Systems
Version	1.0.0-900
Serial Number	000225720069
Host Name	i-4UP 192.168.1.240

PCIe Ports
12 OK

Uplink	PCIe Gen5	x16
Slot1	PCIe Gen4	x16
Slot2	PCIe Gen4	x16
Slot3	PCIe Gen4	x16
Slot4	PCIe Gen4	x16
Slot5	PCIe Gen4	x16

Fan Speed
3 OK

4UP fan1 (PSU backplane)	3450 RPM
4UP fan2 (PSU backplane)	3540 RPM
4UP fan3 (PSU backplane)	3510 RPM

Temperature Sensors
All Sensors: 6 OK

temp0 (PSU backplane)	27 C
temp1 (PSU backplane)	25 C
temp2 (PSU backplane)	25 C
temp2 (PSU backplane)	43 C

Quick LinksQuick Tasks

OSS U-BMC © 2022 One Stop Systems, Inc. Power Health Locator About

Console

On systems with an internal BMC, the **Console** link on the dashboard page takes you to the internal system's BMC login page. The username and password are both set to **admin** by default, but when you change your admin password in the GUI, the console password will also be changed.

If there is no internal computer system BMC, the **Console** link will not be available.

Occasionally, you may need to use the console to perform tasks that are not available in the GUI. OSS provides the **Console** link as an update tool that can be used to update the BIOS and firmware on the internal system's motherboard. Tasks that can be performed with the console include:

- Install the operating system for the first time.
- Update the BIOS and firmware.
- Troubleshoot BIOS or boot-related issues.
- Troubleshoot the operating system.

If you need to use the console to perform a BIOS or firmware update, only OSS-qualified BIOS and firmware updates should be used. Using an unqualified BIOS or firmware update can cause the system to become unstable or inoperable.

GUI Navigation

The GUI is broken down into 4 sections, and the main navigation for each of these is shown at the top of each page. They are labelled **Dashboard**, **System Summary**, **Settings**, and **Maintenance**. Except for the dashboard, each section is separated into more pages that can be navigated using the left navigation panel. If you are using a browser on a mobile device, you may find that the left navigation panel has been hidden, and an icon on the top left of the navigation bar is shown with three horizontal lines. You can click on this icon to open the left navigation panel.

The **System Summary** section is used to monitor sensors, discover more information about the system using the **Device Tree**, and to troubleshoot event notifications using the **Event Log**.

The **Settings** section is used to view and change various U-BMC settings including network access, U-BMC services, system motherboard power, adding and deleting users, and more. You will need administrator or operator permission to modify the settings in this section.

The **Maintenance** section is used to perform U-BMC maintenance actions, such as updating the U-BMC software, turning on the **Locator LED**, performing a **Factory Reset**, and gathering support information with the **Service Report**. You can find a history of the commands that were executed and find out which user has logged into the system with the **Audit Log**. You will need administrator or operator permission to modify the settings in this section.

Footer

The page footer contains indicator lights which monitor the **Power** state of the computer system, the **Health** state of the U-BMC and the entire chassis, and the LED **Locator** status light reflects the state of the LED used to locate the system in a physical environment.

OSS U-BMC © 2023 One Stop Systems, Inc.

Power ● Health ● Locator ●

[About](#)

The **Power** light is blue when the system is powered on and is black when the system is powered off. The **Health** light is blue when the system is healthy and is red when the system is unhealthy. The **Locator** light is blue when the LED is on and is black when the LED is off.

Table controls

There are several tables in the GUI that display sensor information or entries in a log. Each of these tables has a common set of controls that can be used to navigate the data in the table.

All Sensors			
<input type="text" value="Search Filter"/>		4 columns selected	Reset
Name ↑↓	Physical Context ↑↓	Sensor Reading ↑↓	Status ↑↓
psu-fan1	PSU backplane	14000 RPM	OK
psu-fan1r	PSU backplane	14000 RPM	OK
psu-fan2	PSU backplane	14000 RPM	OK
psu-fan2r	PSU backplane	14000 RPM	OK
sys-fan4	Systemboard	90 RPM	Warning
Showing 1 to 5 of 35 entries			
<< < 1 2 3 4 5 > >>			
5			

Here is a description of the common table controls:

- Type a search term in the **Search Filter** text box to update the items shown in the table.
- The column selection dropdown box can be used to show and hide columns. Some columns may be hidden, so use this control to modify the visibility. Column visibility settings will be saved and personalized for each browser used.
- Use the **Reset** button to clear the search filter, reset the column sort order, and to reset the column visibility to the default setting.
- Each heading of the table can be clicked to sort the table in ascending or descending order. You can add more columns to the sort order using CTRL-Click.
- Pagination controls:
 - Use the << arrow icon to jump to the first page, >> to jump to the last page, and <, > arrows to move a single page backward or forward.

- Click the page number to jump to a specific page.
- The dropdown box can be changed to show *All*, *5*, *10*, or *20* items per page.

Sensor Readings

The U-BMC keeps an updated view of the various physical sensors that you can monitor in real time. The **All Sensors** page will show the current values of **Fan Sensors**, **Temperature Sensors**, and **Voltage Sensors** combined in a single table. The different sensor types are also shown on their own pages to allow you to read more detail about each sensor type.

Find the **All Sensors** page by first clicking on **System Summary** in the top navigation, followed by clicking on **All Sensors** in the left navigation.

The screenshot displays the OSS U-BMC interface. At the top, there's a navigation bar with 'Dashboard', 'System Summary' (selected), 'Settings', and 'Maintenance'. On the right, there are buttons for 'Event Log (52)' and 'Log Out'. The left sidebar contains 'All Sensors' (selected), 'Fan Sensors', 'Temperature Sensors', 'Voltage Sensors', 'Device Tree', and 'Event Log' (with a red badge showing 52). The main content area is titled 'All Sensors' and features a search filter, a dropdown for '4 columns selected', and a 'Reset' button. Below this is a table with columns: Name, Physical Context, Sensor Reading, and Status. The table lists five sensors: gpu-fan1, gpu-fan1r, gpu-fan2, gpu-fan2r, and psu2-fan1. At the bottom of the table, it says 'Showing 1 to 5 of 47 entries' with pagination controls. The footer includes 'OSS U-BMC © 2023 One Stop Systems, Inc.', status indicators for Power, Health, and Locator, and an 'About' link.

System Summary

Dashboard System Summary Settings Maintenance

Event Log (52) Log Out

All Sensors

Fan Sensors: Health 11 OK, 1 Critical, 1 Warning

Temperature Sensors: Health 33 OK, 1 Warning

Voltage Sensors: Health 32 OK, 1 Critical

All Sensors Search Filter 4 columns selected Reset

Name ↑↓	Physical Context ↑↓	Sensor Reading ↑↓	Status ↑↓
gpu-fan1	PSU backplane	14000 RPM	OK
gpu-fan1r	PSU backplane	14000 RPM	OK
gpu-fan2	PSU backplane	14000 RPM	OK
gpu-fan2r	PSU backplane	14000 RPM	OK
psu2-fan1	Power supply 2	3000 RPM	OK

Showing 1 to 5 of 47 entries << < 1 2 3 4 5 > >> 5 ↓

OSS U-BMC © 2023 One Stop Systems, Inc. Power ● Health ● Locator ● About

Device Tree

The **Device Tree** page can be used to discover detailed information about each device in the system. When the page is first shown, all the devices' data will need to be requested. You will be shown a plus icon next to the items in the device tree that still need to be requested before the data can be shown. Click on the plus icon to request the data and a progress animation will be shown until the data is ready.

Find the **Device Tree** page by first clicking on **System Summary** in the top navigation, followed by clicking on **Device Tree** in the left navigation.

The screenshot displays the OSS U-BMC interface. The top navigation bar includes links for Dashboard, System Summary (selected), Settings, and Maintenance. On the right, there are buttons for Event Log and Log Out. The left sidebar shows a navigation menu with categories like All Sensors, Fan Sensors, Temperature Sensors, and Voltage Sensors. The 'Device Tree' option is highlighted, and an 'Event Log' button with a notification icon is also visible.

The main content area is divided into two sections. On the left, a search bar is positioned above a list of system components, each preceded by a plus icon indicating that data has not yet been requested. The components listed are Chassis, BIOS, Ethernet Interface, Fan, Memory, PCIe Ports, Power Supply, Processor, Storage, and U-BMC.

On the right, a detailed view of the 'Test name' device is shown. This view includes a table of attributes and their values:

Test name	
Asset Tag	N/A
Chassis Type	Enclosure
Depth Mm	600
Description	Test chassis
Height Mm	200
ID	Rigel-0
Indicator LED	Off
Manufacturer	One Stop Systems
Max Power Watts	3200
Min Power Watts	500
Model	Test model
Name	Test name
Part Number	000000
Power State	On
Serial Number	f0ad4e0ccb2c

At the bottom of the interface, there is a status bar showing 'Power', 'Health', and 'Locator' indicators, all of which are currently active (represented by filled circles). The footer text reads 'OSS U-BMC © 2023 One Stop Systems, Inc.' and an 'About' link is located on the far right.

Event Log

The **Event Log** page has a table that contains all the event notifications that have been sent to the event service subscribers. An administrator or operator user can set up the event service subscribers from the **Event Service** page. The event service allows you to add an email address or an HTTP server to the event subscribers. Event subscribers will be notified of future events as they happen.

Find the **Event Log** page by clicking the **Event Log** button in the top bar, or by clicking on **System Summary** in the top navigation, followed by clicking on **Event Log** in the left navigation.

The screenshot displays the OSS U-BMC Event Log interface. On the left, a sidebar contains navigation links: 'All Sensors', 'Fan Sensors', 'Temperature Sensors', 'Voltage Sensors', 'Device Tree', and 'Event Log' (highlighted with a yellow badge). The top navigation bar includes buttons for 'Dashboard', 'System Summary', 'Settings', 'Maintenance', 'Event Log (1)', and 'Log Out'. The main content area features an 'Event Log' section with a 'Clear Event Log' button, a search filter, and a table with 4 columns: 'Timestamp', 'Status', 'Event Source', and 'Description'. The table contains two entries: one for 'EventLogCleared' (OK) and one for 'psu1-temp2' (Warning). Below the table, it shows 'Showing 1 to 2 of 2 entries' and a pagination control set to 5.

Timestamp	Status	Event Source	Description
Mon Feb 06 2023 13:23:21 GMT-0700	OK	EventLogCleared	Eventlog cleared by user: admin
Mon Feb 06 2023 13:24:15 GMT-0700	Warning	psu1-temp2	psu1-temp2 entered changed state to Warning

The severity of event notifications is **OK** (informational), **Warning**, and **Critical**. The event log table contains a column for **Timestamp** to show when in your browser's local time zone, the condition that occurred, a column for **Event Source** that shows the device or action that caused the condition, and a column for a short **Description** of the condition.

The **Event Log** tracks the delivery status of each event notification. You can view the delivery status of the event notification using the arrow icon on the left side of the row. Clicking this icon will reveal details about the event notification, so you can troubleshoot issues.

Clearing the Event Log

An administrator or operator user can clear the event log using the **Clear Event Log** button. This button is at the top of the event log table and is not visible to read-only users.

Settings Overview

The U-BMC has many settings that are summarized in the settings **Overview** page. This page is available to all users to allow them to see all the system settings briefly. The left navigation panel will hide those entries that are not available to read-only users.

The pages within the **Settings** section allow you to change the following:

- Date and time, time zone, and NTP servers
- U-BMC Network IP, U-BMC hostname, and domain
- U-BMC SSH and IPMI service
- Event service subscriptions and SMTP service
- Computer system power state
- GUI theme color

Find the settings **Overview** page by clicking on **Settings** in the top navigation, followed by clicking on **Overview** in the left navigation.

OSS U-BMC Dashboard System Summary **Settings** Maintenance Event Log (2) Log Out

Overview	Time Settings	Network Settings	System Services	Event Service
Time Settings	Date and Time: 2023-02-06T21:37:09+00:00	Host Name: i-rigel3	SSH Service: Enabled on port 22	SMTP Event Service State: Enabled
Network Settings	Set Time Zone: Etc/UTC	Domain Name:	IPMI Service: Enabled on port 623	Email From Address:
Fan Speed	Network Time Service: Enabled	DHCP Enabled: Yes	KVMIP Console Service: Disabled on port 5229	SMTP User Name:
System Services	Network Time Protocol Servers: ntp.ubuntu.com	MAC Address: 00:05:25:7c:22:36		SMTP Password: The password is unset
System Power and Reset		IP Address: 192.168.1.240		SMTP Server Address:
Users		Subnet Mask: 255.255.255.0		
Event Service		Gateway: 192.168.1.1		
Theme		MTU Size: 1500		
		DNS Servers: 192.168.1.2		
		Link Status: LinkUp		

OSS U-BMC © 2023 One Stop Systems, Inc. Power ● Health ● Locator ● About

Time Settings

The **Time Settings** page allows you to change the date, time, and time zone of the U-BMC. You can configure **Network Time Protocol (NTP)** servers to automatically set the time and date using an NTP server.

Find the **Time Settings** page by clicking on **Settings** in the top navigation, followed by clicking on **Time Settings** in the left navigation.

OSS U-BMC

Dashboard System Summary Settings Maintenance Event Log Log Out

Overview

Time Settings

Network Settings

Fan Speed

System Services

System Power and Reset

Users

Event Service

Theme

Date and Time

Date and Time 02/06/2023 18:57

Set Date and Time

Time Zone

Time Zone Etc/UTC

Set Time Zone

Network Time Protocol (NTP)

NTP Service State

NTP Service Enabled

NTP Server 1

ntp.ubuntu.com

OSS U-BMC © 2023 One Stop Systems, Inc. Power Health Locator About

Date and Time

Disabling the NTP service allows you to manually change the date and time. To change the date and time, click the text within the **Date and Time** input box. You are free to type in the date and time desired or pick a day from the calendar pop-up. The calendar pop-up allows you to click the month and use the arrows to change the month, or you can click the year to rapidly change the year. Click **Set Date and Time** to confirm your changes. A successful message is returned when the value has been updated, and any failures will provide a helpful message.

Time Zone

You can change the **Time Zone** by searching for the time zone in the input box. To search time zones, click the text within the **Time Zone** and begin typing your search. The search results are

automatically updated in the list. Alternatively, you can click the dropdown arrow to find your time zone using a list of all time zones. Click the search result to select the desired time zone. Click **Set Time Zone** to confirm your choice.

NTP Server

You can provide a list of up to 3 NTP servers to use to set your date and time automatically. If the NTP service is disabled, you can manually set the U-BMC date and time. You can remove an NTP server from the list by emptying an input box, for example, **NTP Server 1**. Click **Save NTP Settings** to update the changes to the NTP service state and NTP server list.

NOTE: You should set the correct time and date to avoid an issue with the software update process that compares current date on the U-BMC with the release date of the software update package.

Network Settings

The **Network Settings** page allows you to change the **IP address** and other related Ethernet network settings for the U-BMC, including **IP Address Assignment**, **Subnet Mask**, **Gateway**, **MTU Size**, and **DNS Servers**. These settings modify the network path to which you access the GUI, so use caution when updating these values. The **Network Settings** page allows you to change the **Host Name** and **Domain Name** of the U-BMC.

Find the **Network Settings** page by clicking on **Settings** in the top navigation, followed by clicking on **Network Settings** in the left navigation.

The screenshot displays the OSS U-BMC web interface. At the top, there is a navigation bar with buttons for Dashboard, System Summary, Settings, and Maintenance. On the right of the navigation bar are buttons for Event Log (2) and Log Out. The left sidebar contains a list of navigation items: Overview, Time Settings, Network Settings (highlighted), Fan Speed, System Services, System Power and Reset, Users, Event Service, and Theme. The main content area is divided into two panels. The left panel, titled 'Ethernet Interface', contains the following settings: MAC Address (00:05:25:7c:22:36), IP Address Assignment (DHCP selected, Static unselected), IP Address (192.168.1.240), Subnet Mask (255.255.255.0), Gateway (192.168.1.1), MTU Size (1500), and a link for Domain Name Servers (DNS). Below this is a section for DHCP DNS Settings. The right panel, titled 'Host Name and Domain Name', contains fields for Host Name (i-rigel3) and Domain Name, and a Save DNS Settings button. At the bottom of the interface, there is a status bar showing Power, Health, and Locator indicators, along with the text 'OSS U-BMC © 2023 One Stop Systems, Inc.' and an 'About' link.

Dynamic Host Configuration (DHCP)

There are many fields that are automatically changed when using **DHCP IP Address Assignment**, including **IP Address**, **Subnet Mask**, and **Gateway**. In addition, it might be true that your DHCP server is providing a list of **DNS Servers** to use when configuring the Ethernet network interface. If you want to provide your own DNS server list, you can override the DNS server settings that come from the DHCP server. You can disable the **DHCP DNS Settings** toggle switch, which will enable the **DNS Servers** input box list for you to enter your desired DNS server addresses. Up to 2 DNS servers are supported.

Static IP Address

An administrator can change the **IP Address Assignment** to **Static**, and you will then have the option to set the **IP Address**, **Subnet Mask**, and **Gateway**.

Save Ethernet Configuration Changes

To update the network settings, click the **Save Ethernet Settings** button. A confirmation dialog is shown to ensure that your intention is to allow the settings to change.

NOTE: These settings modify the network path you use to access the GUI, so use caution when updating these values.


Hostname and Domain Name

The **Hostname** for the U-BMC is used to distinguish the U-BMC from other hosts on the network. You can also provide a **Domain Name** to help with name resolution when you are executing a software update command using the **Software Update from Site** command.

Fan Settings

The **Fan Settings** page allows you to change the **Current Fan Speed**. The fan speed setting can take the value of **Automatic** or **Performance**. The **Automatic** setting will allow the U-BMC to control the fan speed based on the temperature of the system. The **Performance** setting will set the fan speed to the maximum speed.

Find the **Fan Settings** page by clicking on **Settings** in the top navigation, followed by clicking on **Fan Settings** in the left navigation.

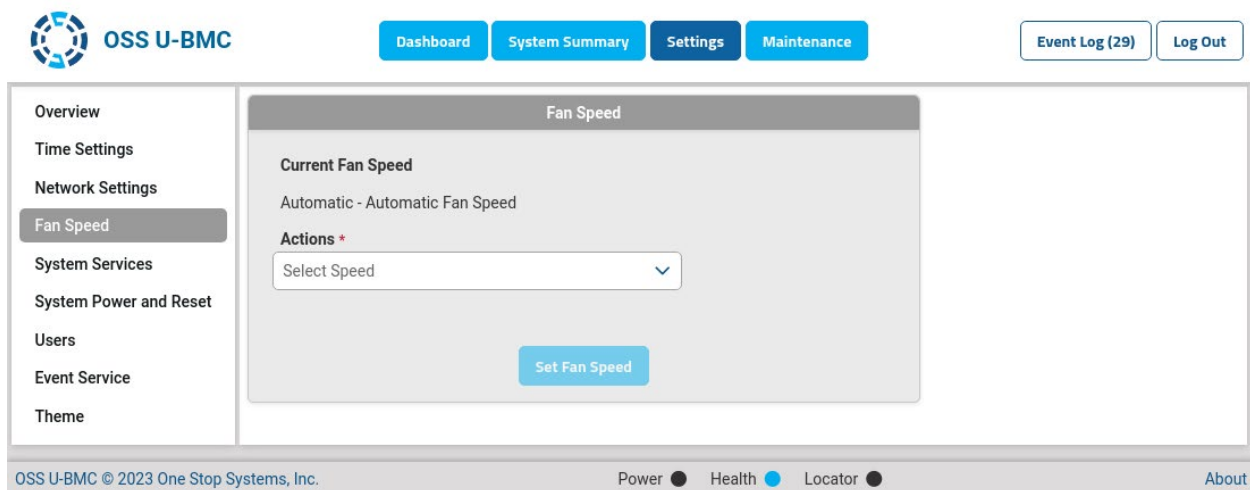

To change the fan speed, select the desired fan speed from the **Actions** dropdown menu. Click **Set Fan Speed** to confirm your choice. A successful message is returned when the value has been updated.

System Services

The **System Services** page allows administrators and operators to change the state of the **SSH Service**, **IPMI Service**, and **KVMIP Console Service**. Disabling these services can help to limit exposure to network attacks on open ports. SSH is used to connect to the U-BMC CLI, and IPMI is used for remote management using IPMI tools. The KVMIP Console Service is used to access the operating system over the network. You must enable this service to install the operating system or to mount virtual media.

Find the **System Services** page by clicking on **Settings** in the top navigation, followed by clicking on **Network Settings** in the left navigation.

The screenshot displays the OSS U-BMC web interface. At the top, there's a navigation bar with 'Dashboard', 'System Summary', 'Settings' (selected), and 'Maintenance'. On the right, there are buttons for 'Event Log (6)' and 'Log Out'. A left sidebar lists various settings categories, with 'System Services' currently selected. The main content area is divided into three panels: 'SSH Service', 'IPMI Service', and 'KVMIP Console Service'. Each panel contains a toggle switch for the service state and a text field for the service port. The SSH and IPMI services are shown as 'Enabled' with their respective ports (22 and 623). The KVMIP Console Service is shown as 'Disabled' with port 5229. Each panel has a 'Save' button at the bottom. At the very bottom of the page, a status bar shows 'Power', 'Health', and 'Locator' indicators, along with a copyright notice and an 'About' link.

Service	Service State	Service Port	Action
SSH Service	Enabled	22	Save SSH Service Settings
IPMI Service	Enabled	623	Save IPMI Service Settings
KVMIP Console Service	Disabled	5229	Save KVMIP Service Settings

The current value of the service is shown next to the toggle button, for example, **SSH Service Enabled** will be shown when the SSH service is active and listening to connections on the **SSH Service port** indicated.

SSH, IPMI and KVMIP Services

To enable and disable these services, change the toggle button, and click **Save SSH Service Settings**, **Save IPMI Service Settings**, or **Save KVMIP Service Settings**.

NOTE: When both the SSH and IPMI services are disabled, you will not have remote access to the OSS U-BMC Command Line Interface (CLI), and the U-BMC will not allow access using other command line tools that use IPMI. Remote management access will then be limited to the

serial console and the GUI. You may also disable HTTP service using the U-BMC CLI to limit exposure to network attacks on the open HTTP(S) ports.

Users

The **Users** page allows an administrator to add and remove U-BMC user accounts. Both the operator and the read-only user will only be allowed to change their password from the **Users** page.

Find the **Users** page by clicking on **Settings** in the top navigation, followed by clicking on **Users** in the left navigation.

The screenshot displays the OSS U-BMC web interface. At the top, there is a navigation bar with buttons for Dashboard, System Summary, Settings, and Maintenance. On the right side of this bar are buttons for Event Log (6) and Log Out. The left sidebar contains a list of navigation items: Overview, Time Settings, Network Settings, Fan Speed, System Services, System Power and Reset, Users (highlighted), Event Service, and Theme. The main content area is titled 'Users' and features an 'Add User' button. Below this button is a table listing three users: 'admin' (Administrator, Online), 'david' (Administrator, Online), and 'mark' (Administrator, Offline). Each user entry has an edit icon. At the bottom of the page, a footer contains the text 'OSS U-BMC © 2023 One Stop Systems, Inc.', status indicators for Power, Health, and Locator, and an 'About' link.

The list of users is shown on the **Users** page where you can find their online/offline status.

Add Users

An administrator can create users by clicking the **Add User** button. An **Add User** dialog is shown where you can type the new user's details: **User Name**, **Password**, and choose their **Role** privileges. Once you have entered all the new user details, click **Add User** to create the user. After the user is successfully added, the list of users is updated to reflect the changes.

Edit Users

To change a user's **Password**, **Role**, or **User Name**, click the pencil icon to open the **Edit User** dialog.

Edit User [Close]

Change account settings for user: admin

Password | Role | User Name | Delete

New Password *

Minimum length 8 letters and digits

New Password (repeat) *

Change Password

Click on the tab for the attribute you want to change. Once you input your desired changes, click the button to accept the changes. The result of these commands will show a success or failure message in the dialog. If you are making more changes to this user, the dialog will remain open. When you are finished making changes, click the close icon in the top of the dialog window to dismiss the dialog.

Delete Users

To delete a user, click on the pencil icon. The **Edit User** dialog is shown. Click on the **Delete** tab. The dialog will confirm that you want to delete the user, and after you click the button **Click to Confirm**, click the **Delete User** button. The list of users is updated to show the changes.

NOTE: The U-BMC will prevent you from deleting and prevent you from changing the role permissions of the last administrator user.

Terminate User Session

An administrator can terminate another user's session. Click on the **Online** user status button. The **Terminate Session** button appears which you can click to terminate the user's session.

Event Service

The **Event Service** page allows an administrator or operator user to make changes to the SMTP event service and the HTTP Redfish event service. Once configured, the SMTP event service will deliver email messages to **Email Subscribers**. The email messages contain alert status notifications from the devices in the U-BMC to allow you to troubleshoot issues as they arise. The event service page allows you to configure HTTP server subscribers as well. The **Redfish HTTP POST Event Subscribers** will receive alert status notifications the same as the SMTP event service. Once you have configured the event service, you can verify your settings by using the **Send Test Event** button to mimic the arrival of a new event notification.

Find the **Event Service** page by clicking on **Settings** in the top navigation, followed by clicking on **Event Service** in the left navigation.

The screenshot shows the OSS U-BMC web interface. At the top, there is a navigation bar with the OSS U-BMC logo, a menu with 'Dashboard', 'System Summary', 'Settings', and 'Maintenance', and buttons for 'Event Log (1)' and 'Log Out'. On the left, a sidebar lists navigation options: Overview, Time Settings, Network Settings, Fan Speed, System Services, System Power and Reset, Users, Event Service (highlighted), and Theme. The main content area is titled 'SMTP Event Service'. It contains several configuration fields: 'SMTP Event Service State' with a toggle switch set to 'SMTP Events Enabled'; 'Email From Address *' with an empty text box; 'SMTP User Name *' with an empty text box; 'Password' with an empty text box and a note 'The password is unset'; 'SMTP Server Address *' with an empty text box; 'Port *' with an empty text box; 'Connection Protocol *' with a dropdown menu set to 'Auto Detect'; and 'Authentication *' with a dropdown menu set to 'None'. A 'Save SMTP Event Service Settings' button is located below these fields. Below the SMTP settings, there is a section titled 'Email Subscribers' which contains a table with the heading 'Email Subscribers'. At the bottom of the page, there is a footer with the text 'OSS U-BMC © 2023 One Stop Systems, Inc.', status indicators for 'Power', 'Health', and 'Locator', and an 'About' link.

Adding Email Subscribers

An administrator or operator user can use the **Add Subscriber** button to add **Email Subscribers**. Find the **Add Subscriber** button above the **Email Subscribers** table. Click the **Add Subscriber** button to open the **Add Email Subscriber** dialog. Change the input box using a valid email address, for example, myuser@mysmtphost.com. Click the **Add Email Subscriber** button to add the subscriber. The **Email Subscriber** table is updated to show the changes.

Removing Email Subscribers

An administrator or operator user can delete email subscribers by first navigating to the **Event Service** page. Click on the **Delete** button next to the subscriber. The **Delete Email Subscriber** dialog box is shown. Use the **Click to confirm** button to confirm that you really want to delete the email subscriber and click the **Delete Email Subscriber** button. The **Email Subscriber** table is updated to show the changes.

Configuring an SMTP Relay Server

To set up the U-BMC to send emails to **Email Subscribers**, you will need to configure the U-BMC to contact an external **SMTP Server**. You can use either a cloud-based server, or an SMTP relay server in your on-premises network. Once you have your SMTP server configuration details:

1. Modify the input boxes for **Email From Address**, **SMTP User Name**, **SMTP Server Address**, and **Port**.
2. Click **Save SMTP Event Service Settings**.
3. After sending the command to save the settings, a message is shown to indicate the success or failure of the settings changes.
4. To validate that your saved settings, use the **Send Test Event** button to verify that your email subscribers receive the message.

NOTE: If the emails are not sent successfully, you can find more information by inspecting the test event's details in the **Event Log**. Click the arrow icon in the left column to expand the row and show more details.

Configuring Redfish HTTP Subscribers

Event service notifications are sent to **Redfish HTTP POST Event Subscribers** if you have added an HTTP server subscriber to receive notifications. The HTTP server should be configured to listen for requests using the HTTP POST method and be configured to receive messages whose HTTP request body is a JSON object. You can add subscriptions for multiple HTTP servers, and an event notification is sent to each HTTP subscriber. The HTTP server subscriber can be either an HTTP or HTTPS server.

To add a new HTTP subscriber:


1. Click **Add HTTP Server** on the **Event Service** page.
2. The **Add HTTP POST Subscriber** dialog is opened.
3. You can click the **URL Form Type** to change how you enter the HTTP subscriber details.
4. You can enter the **Server Address**, **Server Port**, and **URL Path** in separate fields, or you can type the **URL** into the form.
5. Click the **Add Server** button to add the **HTTP POST Subscriber**.

6. After sending the command to add the subscriber, the **HTTP Servers** table is updated with the new value.
7. You can click the **Send Test Event** button to verify that your server subscription settings are correct.

System Power and Reset


The **System Power and Reset** page allows administrator and operator users to change the **Current Power State** of the system.

Find the **System Power and Reset** page by clicking on **Settings** in the top navigation, followed by clicking on **System Power and Reset** in the left navigation.

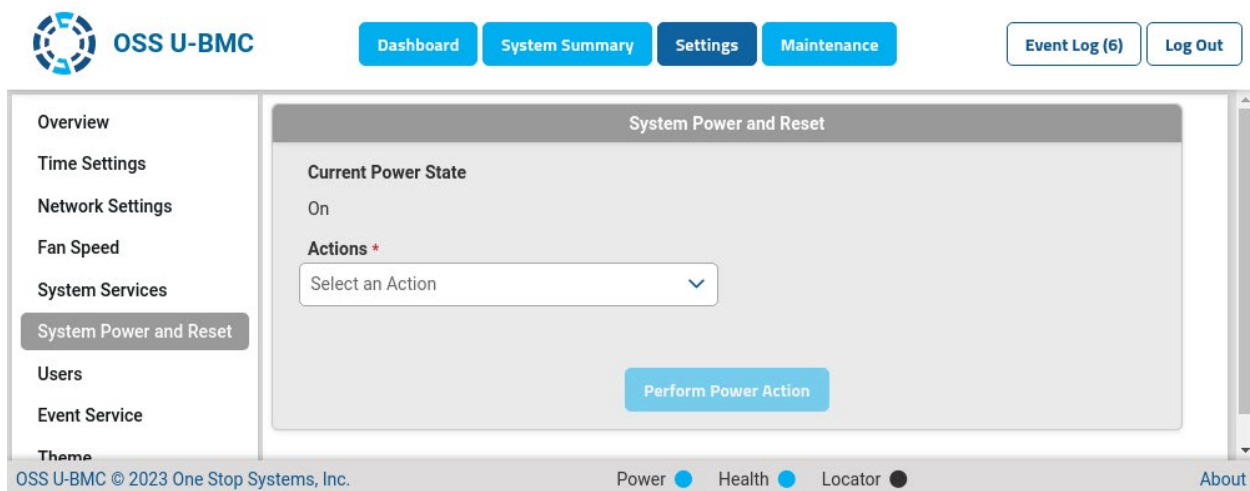

To change the **Power State** of the system's motherboard:


1. Change the **Actions** dropdown menu and choose the desired action, for example, choose **Short Power Button Press** to power on the system's motherboard.
2. Click on **Perform Power Action**. The confirmation dialog opens to confirm your choice.
3. Click on the power action button, such as **Short Power Button Press**, to confirm your choice, or **Cancel** to dismiss the dialog without changing the power state.

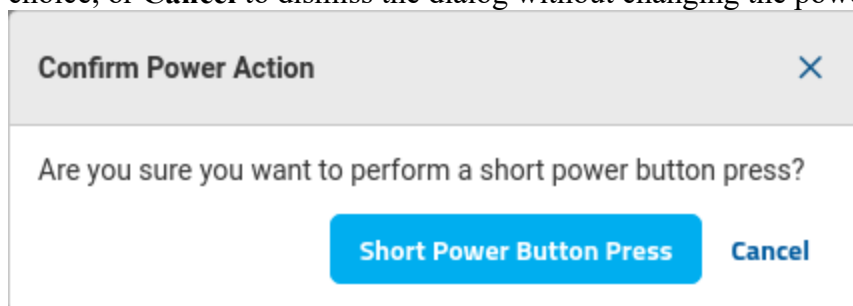

Theme

Theme settings can be personalized and are saved for each browser. You can change the theme colors and the text size of the GUI using the **Theme Picker** dropdown.


Find the **Theme** page by clicking on **Settings** in the top navigation, followed by clicking on **Theme** in the left navigation.

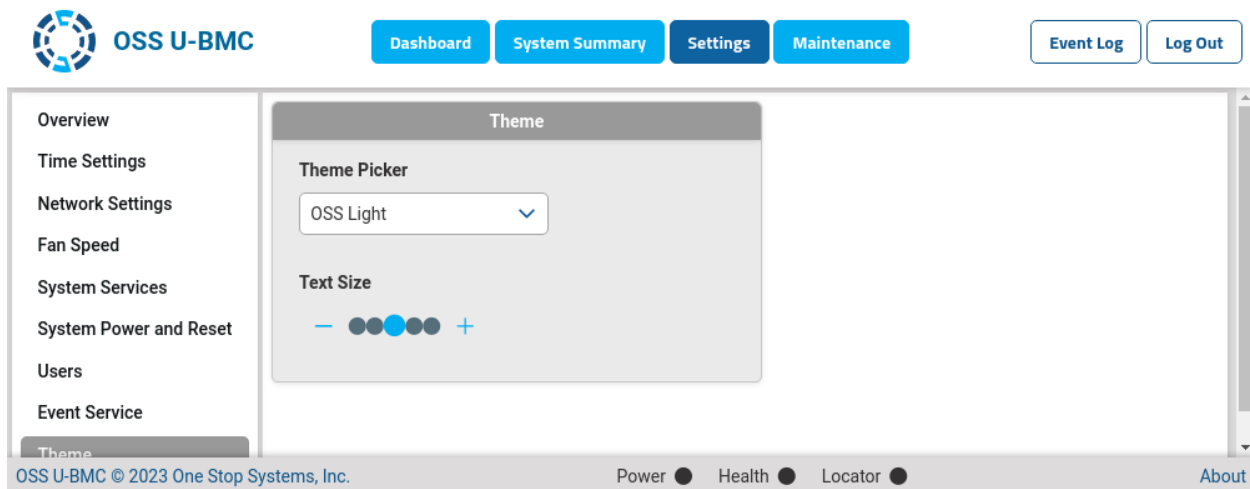

U-BMC Reset


An administrator or operator user can reset the U-BMC. The U-BMC controls an internal system motherboard which has its own BMC. This reset action is also performed on the system motherboard's BMC.

Find the **U-BMC Reset** page by clicking on **Maintenance** in the top navigation, followed by clicking on **U-BMC Reset** in the left navigation.

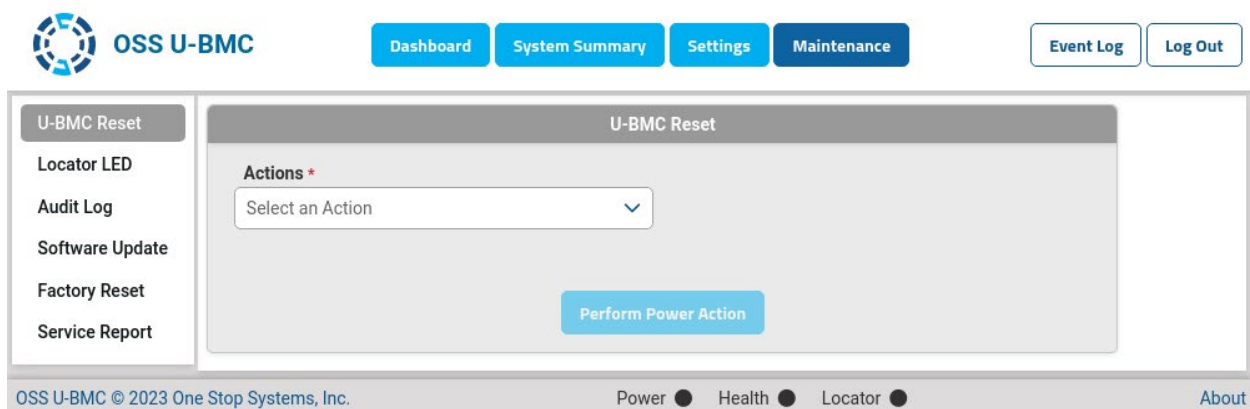

To reset both the U-BMC and the internal system motherboard's BMC:

1. From the page above, choose the power command from the **Actions** dropdown.
2. Click on **Perform Power Action** to open the confirmation dialog.

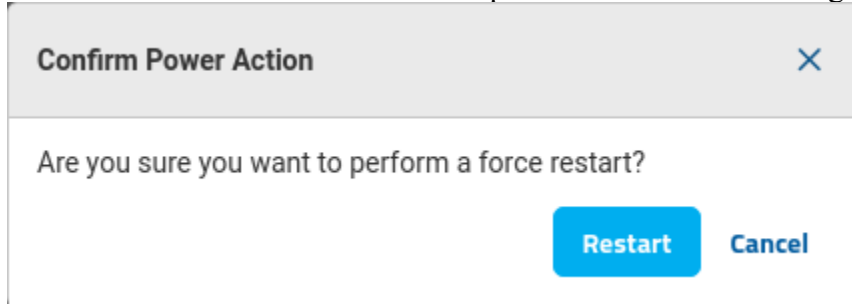


A confirmation dialog box titled "Confirm Power Action" with a close button (X) in the top right corner. The main text asks, "Are you sure you want to perform a force restart?". At the bottom right, there are two buttons: "Restart" (highlighted in blue) and "Cancel".

3. Click on the power action button, for example **Restart**, to reset the U-BMC, or click **Cancel** to dismiss the dialog without issuing the action.
4. After sending the reset command to the system, a successful message is shown.

Locator LED

The Locator LED page allows an administrator or operator user to change the LED lights to help locate the physical system accessed from the GUI. The brightness of the front panel's LEDs can also be changed from this page.

Find the **Locator LED** page by clicking on **Maintenance** in the top navigation, followed by clicking on **Locator LED** in the left navigation.

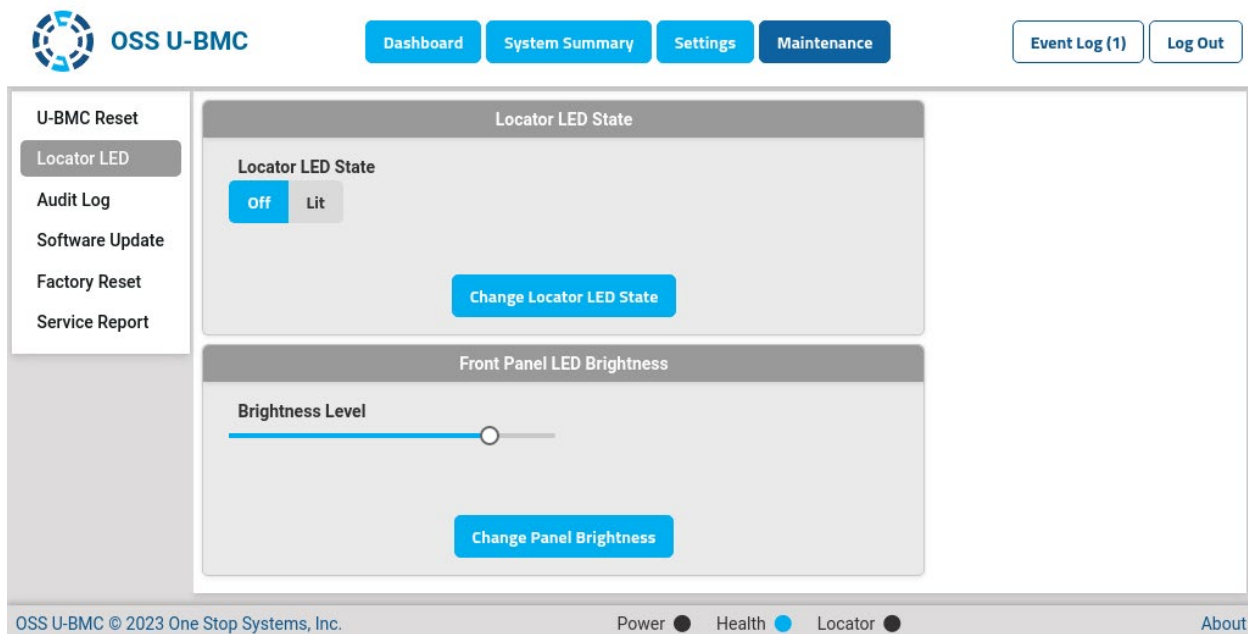

The screenshot shows the OSS U-BMC web interface. The top navigation bar includes "Dashboard", "System Summary", "Settings", and "Maintenance" (highlighted). The left navigation menu lists "U-BMC Reset", "Locator LED" (highlighted), "Audit Log", "Software Update", "Factory Reset", and "Service Report". The main content area is titled "Locator LED State" and contains two sections: "Locator LED State" with "Off" (highlighted) and "Lit" buttons, and a "Change Locator LED State" button; and "Front Panel LED Brightness" with a "Brightness Level" slider and a "Change Panel Brightness" button. The footer shows "OSS U-BMC © 2023 One Stop Systems, Inc." and status indicators for Power, Health, and Locator (all active).

The **Locator LED State** section of this page will show the current state of the LED which is either **Off** or **Lit**. To change the **Locator LED** state:

1. Choose the desired state from the button group: click on **Off** or **Lit**.

2. Click on **Change Locator LED State** to change the settings of the locator LED. A blue light on the front panel will be illuminated indicating the **Lit** state of this LED.

The **Front Panel LED Brightness** section of this page shows the current **Brightness Level** in a slider. You can change the brightness by:

1. Using the slider, change the level to the left to decrease the brightness, or move to the right to increase the brightness.
2. Click on **Change Panel Brightness** to save the settings for panel brightness. The front panel's LEDs will adjust to your settings.

Audit Log

The **Audit Log** page contains a table with log entries that track administrative actions. The user's IP address and username will be shown in the audit log to help track how the system has been used.

Find the **Audit Log** page by clicking on **Maintenance** in the top navigation, followed by clicking on **Audit Log** in the left navigation.

The screenshot displays the OSS U-BMC interface. At the top, there's a navigation bar with 'Dashboard', 'System Summary', 'Settings', and 'Maintenance'. On the right, there are buttons for 'Event Log (52)' and 'Log Out'. The left sidebar shows a list of navigation items: 'U-BMC Reset', 'Locator LED', 'Audit Log' (highlighted), 'Software Update', 'Factory Reset', and 'Service Report'. The main content area is titled 'Audit Log' and features a 'Clear Audit Log' button, a search filter, and a 'Reset' button. Below this is a table with the following data:

Timestamp ↑↓	Status ↑↓	Source Address ↑↓	User Name ↑↓	Description ↑↓
Fri Feb 03 2023 12:37:41 GMT-0700	Informational	10.10.10.69	admin	AuditLog cleared by user: admin
Fri Feb 03 2023 15:53:06 GMT-0700	Informational	10.10.10.69	admin	Session 90 deleted for user: admin
Fri Feb 03 2023 15:53:08 GMT-0700	Informational	10.10.10.69	admin	Session 91 created for user: admin
Fri Feb 03 2023 15:22:41 GMT-0700	Informational	10.10.10.69	admin	Session 1562 created for user: admin
Fri Feb 03 2023 15:23:49 GMT-0700	Informational	10.10.10.69	admin	Session 1569 created for user: admin

At the bottom of the table, it says 'Showing 1 to 5 of 189 entries' with pagination controls. The footer of the page includes 'OSS U-BMC © 2023 One Stop Systems, Inc.', status indicators for Power, Health, and Locator, and an 'About' link.

Administrator and operator users can clear the audit log by clicking on the **Clear Audit Log** button.

Software Update

The **Software Update** page allows administrators and operators to update the U-BMC software. Software update packages are contained in files with the file extension ".iop". You must keep this file extension as it is used to validate that you have uploaded the correct file type. The software update process begins by uploading a file to the U-BMC. You can upload the software

update ".iop" file in a couple of separate ways, either by using your local machine to upload the file to the U-BMC, or by employing an FTP, HTTP, or HTTPS server so that the U-BMC can fetch the software update file. You may consider choosing the fastest option depending on the network transfer rate of the software update file between your workstation and the U-BMC.

Find the **Software Update** page by clicking on **Maintenance** in the top navigation, followed by clicking on **Software Update** in the left navigation.

The screenshot shows the OSS U-BMC web interface. At the top, there is a navigation bar with the OSS U-BMC logo, a 'Dashboard' button, and a 'Maintenance' button. Below the navigation bar, there is a left sidebar with a 'Software Update' link. The main content area is titled 'Software Update from File Upload' and contains a 'Software Update File' section with '+ Choose', 'Upload', and 'Cancel' buttons. Below this is a 'Software Update from Site' section with a 'Software Update Image URI' field, a 'User Name' field, and a 'Password' field. The footer of the interface displays 'OSS U-BMC © 2023 One Stop Systems, Inc.', status indicators for Power, Health, and Locator, and an 'About' link.

Software Update from File Upload

One method of beginning the software update is using your workstation's browser to upload the file to the U-BMC. To upload the software update file:

1. Click on the **Choose** button to open the browser's file chooser dialog.
2. Choose a file with the ".iop" file extension. The name of the file will appear in the **Software Update File** list.
3. Click on the **Upload** button to begin updating the software. Once the software update command has finished, a message is shown to indicate the successful progress. The GUI will begin a countdown before restarting to allow you to cancel the U-BMC restart after the software has been updated. The U-BMC must be restarted to apply the software update. It may be necessary to refresh your browser to see the changes in the GUI.

Software Update from Site

Another method for updating the software on the U-BMC is to provide a URI that points to the software update file.

This feature can be used to update any number of U-BMC devices by using a single software update file. The URI can point to a file on a local or remote server. The U-BMC will fetch the file from the URI and apply the software update. If you supply the values, the optional username and password will be used to log in to the site.


To instruct the U-BMC to download the software update file from a site URI:

1. Type the site's URI into the **Software Update Image URI** input box.
2. Optionally, you may provide a **User Name** and **Password** to use to log in to the site.
3. Click the **Update Software** button to begin the software update process. Once the software update command has finished, a message is shown to indicate the successful progress. The GUI will begin a countdown before restarting to allow you to cancel the U-BMC restart after the software has been updated. The U-BMC must be restarted to apply the software update. It may be necessary to refresh your browser to see the changes in the GUI.

Factory Reset


Administrator and operator users can reset the U-BMC to its factory default state. You can use this command to reset all configuration changes that have been made to the U-BMC. This command will not affect the internal system's motherboard's BMC. You can also use the factory reset command to reset a forgotten password, but this has the side effect of removing all users.

Find the **Factory Reset** page by clicking on **Maintenance** in the top navigation, followed by clicking on **Factory Reset** in the left navigation.

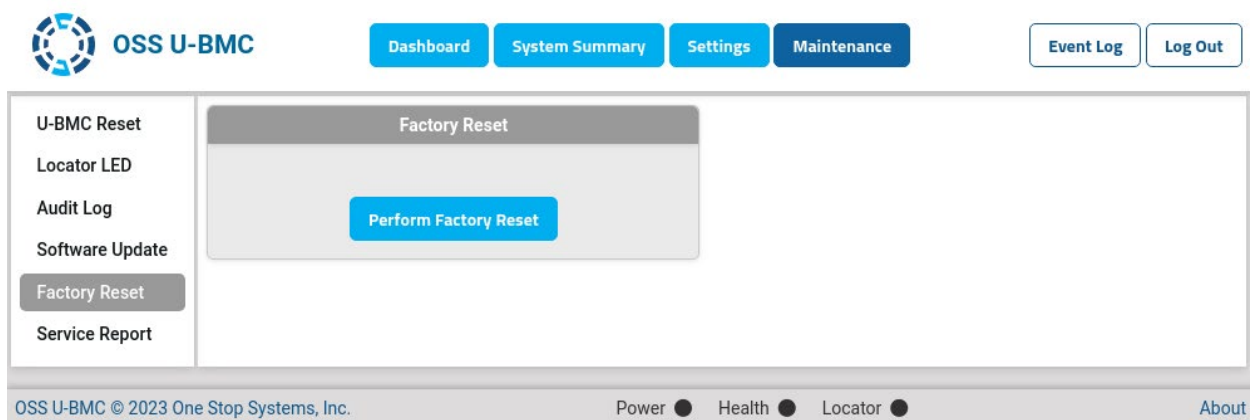

To perform a factory reset:

1. Click on **Perform Factory Reset** to open the confirmation dialog.

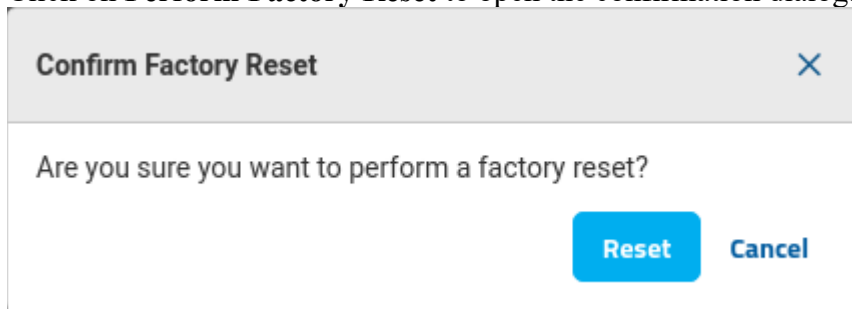


A confirmation dialog box titled "Confirm Factory Reset" with a close button (X) in the top right corner. The main text asks, "Are you sure you want to perform a factory reset?". At the bottom right, there are two buttons: "Reset" (in blue) and "Cancel" (in grey).

2. Click on **Reset** to start the factory reset or click **Cancel** to dismiss the dialog and cancel the factory reset.
3. After the command is sent, a message is shown indicating the success or failure of the command. You should refresh your browser after a factory reset, because the HTTP server's SSH keys will be regenerated.

Service Report

The **Service Report** page contains a table with entries representing the service report archives created. The service report archives contain information about the U-BMC's hardware and software that can be used to help diagnose problems with the U-BMC.

Find the **Service Report** page by clicking on **Maintenance** in the top navigation, followed by clicking on **Service Report** in the left navigation.

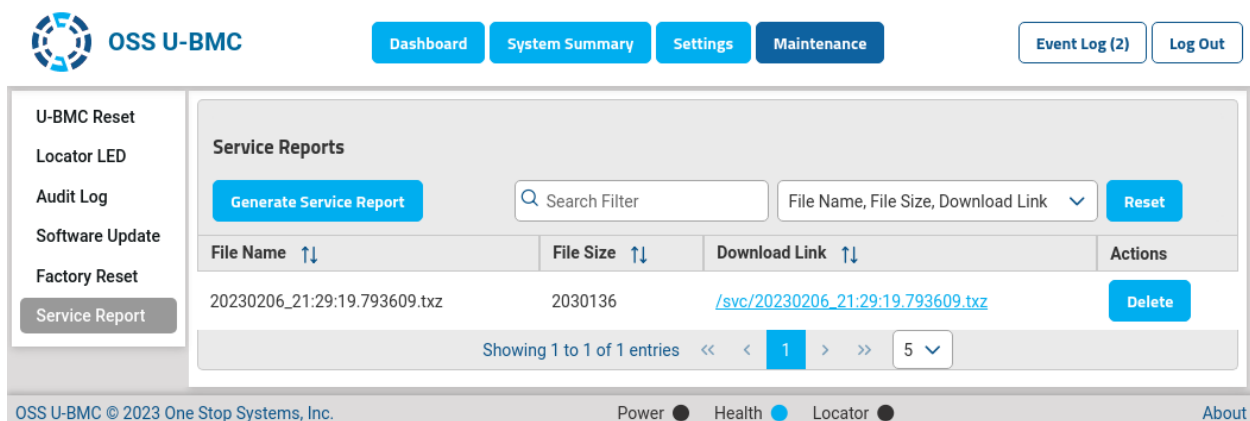

The screenshot shows the OSS U-BMC web interface. The top navigation bar includes "Dashboard", "System Summary", "Settings", and "Maintenance". The left sidebar lists "U-BMC Reset", "Locator LED", "Audit Log", "Software Update", "Factory Reset", and "Service Report" (which is highlighted). The main content area is titled "Service Reports" and features a "Generate Service Report" button, a search filter, and a table of reports. The table has columns for "File Name", "File Size", "Download Link", and "Actions". A single entry is shown with a file name starting with "20230206_21:29:19.793609.txz", a size of "2030136", and a download link. A "Delete" button is next to the entry. At the bottom, there is a pagination bar showing "Showing 1 to 1 of 1 entries" and a status bar with "Power", "Health", and "Locator" indicators.

File Name	File Size	Download Link	Actions
20230206_21:29:19.793609.txz	2030136	/svc/20230206_21:29:19.793609.txz	Delete

Create Service Report

To create a service report archive:

1. Click on **Create Service Report** to begin creating a service report archive. A message will be shown indicating the success or failure of the command.

2. Once the service report archive has been created, it will be listed in the table on the **Service Report** page. You can download the service report archive by clicking on the **Download** button in the table.

You can delete the service report archive by clicking on the **Delete** button in the table.

Managing the system with the OSS U-BMC Command Line Interface (CLI)

The command line interface (CLI) is a text-based method for accessing the configuration and management options of the system. You can access the CLI using secure shell (SSH) or by connecting a serial console over USB.

CLI Overview

The U-BMC CLI commands are divided into several namespaces, and each namespace has commands such as `update`, or `ls`. To use these commands, you must first switch to the namespace where the command applies, such as using the `bmc` command, for example:

```
> bmc -q  
/bmc/>
```

In the example above, the `bmc` command was executed to switch namespace, and the `-q` flag was used so the command output is quiet. Once you have entered a namespace the prompt text will be shown as `/bmc/>`. The prompt text shown before the cursor indicates the current namespace that further commands such as `ls` and `update` will apply to.

Connecting to the CLI

A connection is made to the CLI through SSH or USB serial using a terminal emulator application such as PuTTY. PuTTY can be used to create a connection with SSH or to create a connection through the serial console.

Secure Shell (SSH)

Connecting to the U-BMC using SSH requires the following:

- The computer has an interactive terminal emulator application with an SSH client installed.
- The computer has an IP address on a network with the U-BMC so that they can reach each other.
- There is a known username and password for making a connection.

The default username and password is **admin**.

Here is an example of how to connect to the U-BMC using the `ssh` command:

```
# ssh admin@UBMC  
Copyright (c) 2021 One Stop Systems.  
...
```

```
Welcome to the Rigel BMC.
```

```
admin@UBMC />
```

USB Serial

When connecting to the serial console, you can use the same credentials that are used to connect with SSH.

The serial console allows you to reset the U-BMC to its factory default state in case of a forgotten password. To reset the U-BMC to its factory default state, you must connect to the serial console and log in with the username "reset" and password "reset". Once you have logged in, you can use the `reset_to_factory_default` command to reset the U-BMC to its factory default state. You must also supply the `--trust_me_i_am_an_engineer` flag to the command to confirm that you are sure you want to reset to factory default.

NOTE: Consider limiting physical access to only those who are trusted.

Serial Port Location

The USB serial port is identified as the port labeled **Serial** on the I/O shield of the system.

On a Linux system, the USB serial device can be found by executing the `dmesg` command and inspecting the output for the device name. For example:

```
# dmesg
...
[93917.801259] usb 2-2: pl2303 converter now attached to ttyUSB0
```

The USB serial device name for the above is `ttyUSB0`.

Serial Connection Settings

A computer with a serial connection program should use these settings:

- Bps/Par/Bits: 115200 8N1
- Speed (bits per second/ baud): 115200
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: None

Other connection settings:

- Carrier-watch: Off
- Handshake: None
- Prefixing: All

- Streaming: Off

Role-based Authorization

The CLI supports role-based authorization. Each role (users, operators, and administrators) can log in, and their privilege to execute some commands is limited based on their role.

User Authorized Privileges

There are three authorization privilege roles: **User**, **Operator**, and **Administrator**.

- **User Role**
 - System components are read-only
 - Can change their own password
- **Operator Role**
 - Has all the permissions of a **User**
 - System configuration changes are allowed
 - Operator role users are not allowed to make changes to other users
 - Operator role users are not allowed to reset to factory default settings
- **Administrator Role**
 - All permissions to change system components
 - Only administrators can create/delete users or change usernames
 - Administrator role users are allowed to reset to factory default settings

Editing the Command Line

Entering Commands

A CLI command is a series of *keywords*, *parameters* and *arguments* that are typed into the terminal's text buffer. The command is executed and processed by the system using the enter key.

```
/> KEYWORD --PARAMETER ARGUMENT [Press Enter]
```

A CLI command may contain a **Common Command** keyword or a **Namespace** keyword. Once you have switched to a namespace context, a **Subcommand** keyword that applies to the namespace context is an allowed keyword.

```
/> NAMESPACE  
NAMESPACE/> SUBCOMMAND --PARAMETER ARGUMENTS
```

The arguments to a parameter may be optional, required, and positional arguments do not require a parameter. The command help can be used in the CLI to assist you with the correct usage of the available arguments. You can obtain the help for a keyword by executing the `help` command

with the keyword as an argument. The example below shows how to switch to the `interfaces` namespace and get help for the `configure` subcommand keyword:

```
/> interfaces -q
/interfaces/> help configure
usage: configure [--ifname {}] [--dhcp] [--ip IP] [--netmask NETMASK]
               [--gateway GATEWAY]
               [--nameservers NAMESERVERS [NAMESERVERS ...]]
               [--mtu MTU] [--force]
```

As in the above example, the following conventions are used to show command line usage:

- 2 dashes, `--`, are shown before parameter names. Parameters may also take an argument(s), shown as an uppercased word or list of uppercased words.
- Square brackets, `[]`, are shown around optional parameters and arguments. Not all parameters are required to form a complete CLI command.
- Uppercased words, like `ARGUMENT`, are shown after parameters that take an argument value.
- Ellipsis, `...`, are shown to indicate that repeated arguments are allowed for a parameter. You may specify multiple arguments to a parameter separated with a space, for example:
`--nameservers 1.ntp.org 2.ntp.org`
- Curly braces, `{}`, are shown around arguments to some parameters. You can use tab completion to assist you in supplying the correct value.

If an argument is required and not supplied on the command line, an appropriate message will be shown:

```
/interfaces/> configure --ip 192.168.1.100
The interface name is required.
/interfaces/> ls
lan1
lan2
/interfaces/> configure --ip 192.168.1.100 --ifname lan1
```

Tab Completion

Incomplete command lines can be automatically completed using the tab key. While editing a CLI command, the tab key can be used to complete all the parts of a CLI command: keywords, parameters, and arguments. If a command line is incomplete or has invalid parameters and arguments, then an appropriate error message is displayed. This helps you to enter the correct command.

When pressing tab, the system will help you to complete a keyword by printing a list of keywords that match the letters in the command line. If there is only one match for the keyword, then the keyword is completed automatically.

When pressing tab after 2 dashes, --, the system will attempt to automatically complete the parameter. If tab is pressed after a parameter that accepts an ID, a list of valid IDs is shown, or it is replaced with the ID if the autocompletion finds a single match.

Repeating Commands

After successfully executing a CLI command, it is recorded in history. Using the command history allows you to recall previous commands to edit, review, or reissue them.

To scroll through the history, use the up/down arrows on your keyboard.

Keyboard Shortcuts

There are several helpful keyboard shortcuts. The notation below, Ctrl+p for example, shows that the control key and the P key must be pressed at the same time. Hold the control key down while pressing the P key to invoke the shortcut. If there are multiple keyboard shortcuts for an action, then the keyboard shortcut will use "OR" to separate the alternates.

Keyboard Shortcut	Action
Ctrl+p OR Up Arrow	Recalls the history of the command line most recently entered. This keyboard shortcut may be repeated several times to move through the history in reverse sequence.
Ctrl+n OR Down Arrow	Recalls the history of the command line that occurred later, up to the most current empty text entry buffer.
Ctrl+c	Cancels entry of the command line text currently typed into the text entry buffer. A new empty text buffer is printed to the terminal to accept the next command line input.
Ctrl+m OR Enter	Sends the command line text to the system for processing.
Ctrl+k	The application has an internal clipboard feature. Pressing Ctrl+k will cut the text after the text entry insertion point and place the text on the internal clipboard. The internal clipboard is represented as a ring buffer, so cutting more text into the buffer places additional entries in the ring buffer.
Ctrl+y	Pastes text into the command line from the application internal clipboard. Text is pasted at the current position of the text entry insertion point.
Alt+y	Rotates the pasted text from the internal clipboard's ring buffer. This command must immediately follow a Ctrl+y paste command. Any other keyboard action that follows the Ctrl+y paste action will cancel the ability to rotate the ring buffer with Alt+y.
Ctrl+h	Delete one character backward (same as backspace).
Ctrl+a OR Home	Moves the text entry insertion point to the beginning of the current text entry buffer.
Ctrl+e OR End	Moves the text entry insertion point to the end of the current text entry buffer.

Ctrl+b OR Left Arrow	Moves the text entry insertion point backward one letter.
Ctrl+f OR Right Arrow	Moves the text entry insertion point forward one letter.
Alt+Left Arrow	Moves the text entry insertion point backward one word.
Alt+Right Arrow	Moves the text entry insertion point forward one word.
Ctrl+r	Places user input into a text entry mode that allows incremental search the history of commands. It is indicated with the CLI prompt text <code>(reverse-i-search)</code> . Incremental searches begin as you type the search string. As each character of the search string is typed, the command line displays the next entry from the history matching the string typed so far. Press ENTER to accept the search and send the command to the system.
Ctrl+g	Aborts the incremental search text entry mode as indicated with the CLI prompt text returning to normal, for example <code>admin@UBMC/></code> .

Common Commands

There are a few commands that can be used in any context, regardless of whichever namespace has been chosen. These common commands include the following:

- Command "cd"
- Command "cls"
- Command "exit"
- Command "health"
- Command "help"
- Command "quit"

Command "cd"

Switch namespace context. Use the `--verbose` flag to show namespace details after switching context to the namespace.

```
/> cd NAMESPACE --verbose
```

Command "cls"

Clear the screen.

Example:

```
/> cls
```

Command "exit"

Exit this application.

Example:

```
/> exit
```

Command "health"

Display the system health summary.

Example:

```
/> health
```

Sensor	Sensor Type	Health
BAT	Voltage	Critical
FAN1	Fan	Warning
FAN5	Fan	Critical
CPU Temp	Thermal	Warning
ipmi_feeder	system	Critical

NOTE: The serial number will be important to hold onto when contacting customer support representatives. The `bmc` command can be used to obtain the serial number, for example:

```
/> bmc
```

Description	Value
...	...
Serial Number	f0ad4e0ccb2c

Command "help"

List available command keywords or provide detailed help for a specific command. The optional positional argument `COMMAND` is used to retrieve help for a specific command.

```
/> help --verbose COMMAND
```

Example:

```
/> help
```

Command "quit"

Exit this application.

Example:

```
/> quit
```

Command Line Namespaces

What follows is a reference for all namespaces, subcommands, and arguments. This section contains the following topics:

- [Namespace "auditlog"](#)
- [Namespace "bmc"](#)
- [Namespace "chassis"](#)
- [Namespace "eventlog"](#)
- [Namespace "event_service"](#)
- [Namespace "event_subscriptions"](#)
- [Namespace "fans"](#)
- [Namespace "interfaces"](#)
- [Namespace "pcie"](#)
- [Namespace "psus"](#)
- [Namespace "servicereport"](#)
- [Namespace "systems"](#)
- [Namespace "terminal"](#)
- [Namespace "thermals"](#)
- [Namespace "users"](#)
- [Namespace "voltages"](#)

Namespace "auditlog"

The `auditlog` namespace can be used to list and clear the audit log. Use `-q` to enter the namespace without listing the audit log.

Available Subcommands in "auditlog":

- **clear** - Clear the audit log.
- **get** - Show audit log entry details.
- **iterate** - Iterate the audit log entries.
- **ls** - Iterate the audit log entries.

```
/> auditlog
```

Id	Username	Event Start	Action
1	admin	2022-07-27T15:29:21+00:00	Basic authentication success: admin

```
/auditlog/>
```

Clear Log Entries

Clear the audit log.

Example:

```
/auditlog/> clear
```

Get Detail

Show audit log entry details.

Example:

```
/auditlog/> get ID
```

List

Iterate the audit log entries. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/auditlog/> iterate  
/auditlog/> ls
```

Namespace "bmc"

The `bmc` namespace can be used to change generic `bmc` settings like hostname, time zone as well as rebooting the `bmc` and resetting the configuration to factory default. Use `-q` to enter the namespace without listing the current configuration.

NOTE: The serial number will be important to hold onto when contacting customer support representatives.

Available Subcommands in "bmc":

- **discover** - Discover all available U-BMC devices in the network.
- **firmware_update** - Update the U-BMC firmware. The image used for the update needs to reside on an HTTP(S) or FTP server. After completing the update, the U-BMC will reboot. The URL can be <ftp://server/some/path> or <http://server/some/path>. The USERNAME and PASSWORD will be used to log in to the URL.
- **iterate** - Show the BMC related settings.
- **ls** - Show the BMC related settings.
- **reset** - Reset the U-BMC power.
- **reset_to_factory_default** - Reset the U-BMC to factory default. The factory reset command wipes all settings, and the U-BMC behaves as if it were booted for the first time. Use this option when you have lost your password(s) or when you want to (re)start with a pristine clean system.

- **update** - Update a BMC setting or service.
See help update for details about updating BMC settings. NOTE: changing the time zone or hostname will disconnect SSH server sessions.

```
/> bmc
```

Service	Port	Enabled
SSH	22	True
IPMI	623	True
HTTP(S)	80 / 443	True
KVMIP	5229	False

Description	Value
NTP Client Enabled	True
NTP Servers	ntp.ubuntu.com
Time Zone	Etc/UTC
DateTime Offset	+00:00
DateTime	2023-01-20T22:40:00+00:00
Hostname	UBMC
FQDN	UBMC
Firmware Version	1.0.0-930
Serial Number	f0ad4e0ccb2c

```
/bmc/>
```

Discover

Discover all available U-BMC devices in the network.

Example:

```
/bmc/> discover
```

Host Name	Origin	Interface	IPv4 Address
i-4UP	lan1		192.168.1.55
i-rigel3	lan1		192.168.1.240

Firmware Update

Update the U-BMC firmware. The image used for the update needs to reside on an HTTP(S) or FTP server. After completing the update, the U-BMC will reboot. The URL can be `ftp://server/some/path` or `http://server/some/path`. The `USERNAME` and `PASSWORD` will be used to log in to the URL.

```
/bmc/> firmware_update --url URL
```

```
/bmc/> firmware_update --url URL --username USERNAME --password PASSWORD
```

Example:

```
/bmc/> firmware_update
```

List

Show the BMC related settings. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/bmc/> iterate  
/bmc/> ls
```

Reset Power

Reset the U-BMC power. Accepts either graceful (default), or force `ACTION` argument.

Example:

```
/bmc/> reset --action graceful  
/bmc/> reset --action force
```

Reset Factory Default

Reset the U-BMC to factory default. The factory reset command wipes all settings, and the U-BMC behaves as if it were booted for the first time. Use this option when you lose your password(s) or when you want to (re)start with a pristine clean system.

Example:

```
/bmc/> reset_to_factory_default
```

Update U-BMC Settings

The update subcommand can be executed in the `bmc` namespace to update the U-BMC settings.

KVMIP

Enable the KVMIP service.

Example:

```
/bmc/> update --enable_ntp  
/bmc/> update --disable_kvmip
```

SSH

Change the SSH service state. Disabling both SSH and HTTPS limits your access to only the serial console! Confirm that this is acceptable by using the `trust_me_i_am_an_engineer` option.

Example:

```
/bmc/> update --enable_ssh  
/bmc/> update --disable_ssh --trust_me_i_am_an_engineer
```

IPMI

Change the IPMI service state.

Example:

```
/bmc/> update --enable_ipmi  
/bmc/> update --disable_ipmi
```

HTTP

Change the HTTP service state. Disabling both SSH and HTTPS limits your access to only the serial console. Confirm that this is acceptable by using the `trust_me_i_am_an_engineer` option.

Example:

```
/bmc/> update --enable_http  
/bmc/> update --disable_http --trust_me_i_am_an_engineer
```

NTP

Change the NTP servers using a space separated list containing one or more NTP servers.

Syntax: `ntp0.nl.net ntp1.nl.net`

Example:

```
/bmc/> update --ntp_servers NTP_SERVERS [NTP_SERVERS ...]
```

Change the NTP service state.

Example:

```
/bmc/> update --enable_ntp  
/bmc/> update --disable_ntp
```

Date and Time

Change the date and time of the system. The NTP service must be disabled before executing this command. Syntax: 2022-01-31T04:47:18

Example:

```
/bmc/> update --datetime DATETIME
```

Hostname

Change the hostname of the U-BMC. Changing the hostname will disconnect the SSH session.

Example:

```
/bmc/> update --hostname HOSTNAME
```

FQDN (Fully Qualified Domain Name)

Change the hostname to a Fully Qualified Domain Name (FQDN). Changing the FQDN will disconnect the SSH session.

Example:

```
/bmc/> update --fqdn FQDN
```

Time Zone

Set the time zone of the U-BMC. Use the tab key on your keyboard for autocompletion. Changing the time zone may disconnect the SSH session.

Example:

```
/bmc/> update --timezone TIMEZONE
```

Namespace "chassis"

The `chassis` namespace can be used to investigate `chassis` metrics and control the `chassis` power. Controlling the `chassis` power is different from controlling the system board power. It allows for the force of all components in the `chassis` and can turn the system On or Off even when the system BMC is no longer responding.

Use the `-q` flag to silently switch to the `chassis` namespace.

Available Subcommands in "chassis":

- **iterate** - Iterate the chassis.

- **ls** - Iterate the chassis.
- **power** - Change the power state of the chassis. While the “systems” namespace can be used to control the BMC of a system the chassis power control provides absolute control over the chassis power. The chassis power command can be used to turn a system board on or off even when the system’s BMC is no longer responding.

```
/> chassis
```

Chassis	Manufacturer	Model	Serial Number	Health	Power
Rigel-0	One Stop Systems	Test model	f0ad4e0ccb2c	OK	On

```
/chassis/>
```

List

Iterate the chassis. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/chassis/> iterate
/chassis/> ls
```

Chassis Power

Change the power state of the chassis.

While the systems namespace can be used to control the BMC of a system, the chassis power control provides absolute control over the chassis power. The chassis power command can be used to turn a system board on or off even when the systems BMC is no longer responding. This may be the case after updating the systems BMC firmware.

Examples:

Pressing the reset button on the chassis will reset the system board and all components in the chassis. The system board will be powered on again after a short delay.

```
/chassis/> power --push_reset_button
```

A short press of the power button will turn the chassis and system board on if it is off.

```
/chassis/> power --push_power_button
```

A long press of the power button will turn the chassis and system board off.

```
/chassis/> power --hold_power_button
```

Namespace "eventlog"

The `eventlog` namespace can be used to list and clear the event log. Use `-q` to enter the namespace without listing the `eventlog`. Available Subcommands in "eventlog":

- **clear** - Clear the event log.
- **get** - Show event log entry details.
- **iterate** - Iterate the event log entries.
- **ls** - Iterate the event log entries.

```
/> eventlog
```

Id	Name	Event time	Sensor Type	Sensor Number	Severity
1	ps_backplane	2022-11-17 23:36:42	ipmi_srv	1	Critical
2	BAT	2022-11-18 15:28:16	Voltage	0	Critical
3	FAN1	2022-11-18 15:28:18	Fan	96	Warning
4	FAN5	2022-11-18 15:28:18	Fan	100	Critical
5	CPU Temp	2022-11-18 15:28:18	Thermal	48	Warning
6	BAT	2022-11-18 15:30:20	Voltage	12	Critical

```
/eventlog/>
```

Clear Log Entries

This will remove all entries from the event log.

Example:

```
/eventlog/> clear
```

Get Detail

Show event log entry details.

Example:

```
/eventlog/> get ID
```

List

Iterate the event log entries. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/eventlog/> iterate
```

```
/eventlog/> ls
```

Namespace "event_service"

The `event_service` namespace can be used to list and change the event service configuration. This includes the SMTP settings. Use `-q` to enter the namespace without listing the event configuration.

Available Subcommands in "event_service":

- **list** - Get the event service settings.
- **ls** - Get the event service settings.
- **test_event** - Generate an event for testing email delivery and/or the Redfish ReST API event service.
- **update** - The update command can be executed in the `event_service` namespace to update the event service settings. Both arguments `smtp_from` and `smtp_address` are required if not already set.

```
/> event_service
```

Attribute	Value
Retry interval (sec)	60
Delivery retry attempts	3
Service Health	OK
Service State	Enabled
SMTP username	
SMTP password	
SMTP Port	None
SMTP Server address	
SMTP Sender (from) address	
SMTP Connection Protocol	AutoDetect
SMTP Authentication	None
SMTP Supported Authentication	None, Login, Plain, CRAM_MD5
SMTP Supported Transports	AutoDetect, None, StartTLS, TLS_SSL
SMTP Enabled	True
REST Enabled	True
Service Enabled	True

```
/event_service/>
```

Event Service Settings

Get the event service settings.

Example:

```
/event_service/> list
```

```
/event_service/> ls
```

Test Event Service

Generate an event for testing email delivery and/or the Redfish ReST API event service. This command will generate an event with the event severity `Warning` and the event message `TestEvent`.

Example:

```
/event_service/> test_event
```

Update Event Service Settings

The `update` subcommand can be executed in the `event_service` namespace to update the event service settings. Both arguments `smtp_from` and `smtp_address` are required if not already set.

SMTP Service State

Changes the state of the SMTP email events service. This feature allows the event service to send events to email subscribers.

Example:

```
/event_service/> update --enable_smtp  
/event_service/> update --disable_smtp
```

SMTP Username

The username used to authenticate against the SMTP server when sending emails to subscribers. The arguments `smtp_username` and `smtp_password` are required if not already set.

Example:

```
/event_service/> update --smtp_username SMTP_USERNAME
```

SMTP Password

The password is used to authenticate against the SMTP server when sending emails to subscribers. The arguments `smtp_username` and `smtp_password` are required if not already set.

Example:

```
/event_service/> update --smtp_password SMTP_PASSWORD
```

SMTP Server Address

The SMTP service IP address or DNS name.

Sets the SMTP server address location of the SMTP server used to send event emails to email subscribers. Both arguments `smtp_from` and `smtp_address` are required if not already set.

Example:

```
/event_service/> update --smtp_address SMTP_ADDRESS
```

SMTP Server Port

The SMTP server port.

Example:

```
/event_service/> update --smtp_port SMTP_PORT
```

SMTP From Address

The SMTP sender (from) email address. The arguments `smtp_from` and `smtp_address` are required if not already set.

Example:

```
/event_service/> update --smtp_from SMTP_FROM
```

SMTP Connection Protocol

The SMTP connection protocol. Acceptable values for `PROTOCOL` are `AutoDetect`, `None`, `StartTLS`, and `TLS_SSL`.

Example:

```
/event_service/> update --connection_protocol PROTOCOL
```

SMTP Authentication Protocol

The SMTP authentication protocol. Acceptable values for `PROTOCOL` are `None`, `Login`, `Plain`, and `CRAM_MD5`.

Example:

```
/event_service/> update --smtp_auth PROTOCOL
```

Namespace "event_subscriptions"

The `event_subscriptions` namespace can be used to change event subscriptions. Use `-q` to enter the namespace without listing the event subscriptions.

Available Subcommands in "event_subscriptions":

- **create** - Create a new subscription to the event service. The event subscription format can either be an email address or a ReST POST HTTP server address.
- **delete** - Delete a subscription using the ID.
- **iterate** - Iterate the configured event subscriptions.
- **ls** - Iterate the configured event subscriptions.

```
/> event_subscriptions
```

Id	Destination	Protocol
1	alerts@example.com	SMTP
4	alerts@example.com	SMTP
32	https://alerts.example.com/redfish-post/listener	Redfish
3	https://alerts.example.IOLsh-post/listener	Redfish
3a	https.com/redfish-post/listener	Redfish

```
/event_subscriptions/>
```

Create Event Subscription

Create a new subscription to the event service. The event subscription format can either be an email address or a ReST POST HTTP server address.

Examples:

Send event messages to this email address.

```
/event_subscriptions/> create --email_to EMAIL_TO
```

Send ReST POST notifications to the specified URL. The HTTP POST request will contain a JSON body with the event details.

```
/event_subscriptions/> create --rest_url REST_URL
```

This is an example of the JSON body that will be posted to the `REST_URL` resource.

```
{
  "OriginOfCondition": "/redfish/v1/Systems/1/LogServices/Log/Entries/4",
  "Message": "CPU Temp entered state: Warning",
  "MessageId": "0x002",
  "EventTimestamp": "2022-08-04T17:30:51+00:00",
  "EventId": 4,
  "RedfishRetry": 0,
  "RedfishLastError": ""
}
```

```
}
```

Delete Subscription

Delete a subscription using the ID.

Example:

```
/event_subscriptions/> delete --subscription ID
```

List

Iterate the configured event subscriptions. Optionally, add the `-l` flag to list the event subscriptions in long format.

Example:

```
/event_subscriptions/> iterate
/event_subscriptions/> ls
```

Namespace "fans"

The `fans` namespace can be used to manage fans. Use `-q` to enter the namespace without listing the fans.

Available Subcommands in "fans":

- **fan_control** - Change the fan control mode to Automatic or Performance. When Performance is selected the fans will run at max RPM. Automatic control will change the fan RPMs depending on the temperature.
- **get** - Retrieve detailed information about a fan.
- **iterate** - List all the fan IDs.
- **ls** - List all the fan IDs.

```
/> fans
Fan control mode: Automatic
```

Name	Physical Context	Lower NC	RPM	Health
FAN1	Systemboard	100	90	Warning
FAN2	Systemboard	100	6600	OK
FAN3	Systemboard	100	6500	OK
FAN5	Systemboard	100	6	Critical
FAN7	Systemboard	100	6600	OK
gpu-fan1	PSU backplane	1470	14000	OK
gpu-fan1r	PSU backplane	1470	14000	OK
gpu-fan2	PSU backplane	1470	14000	OK

gpu-fan2r	PSU backplane	1470	14000	OK
-----------	---------------	------	-------	----

```
/fans/>
```

Fan Speed Control

Change the fan control mode to Automatic or Performance. When Performance is selected the fans will run at max RPM. Automatic control will change the fan RPM depending on the temperature.

Example:

```
/fans/> fan_control --mode Automatic
/fans/> fan_control --mode Performance
```

Get Detail

Retrieve detailed information about a fan.

Example:

```
/fans/> get SENSOR_NAME
```

List

List all the fan IDs. Optionally, add the `-l` flag to list the fans in long format.

Example:

```
/fans/> iterate
/fans/> ls
```

Namespace "interfaces"

The `interfaces` namespace can be used to manage Ethernet interface configurations. Use `-q` to enter the namespace without listing the `interfaces`.

Available Subcommands in "interfaces":

- **configure** - Update the interface configuration.
- **disable** - Remove the interface configuration and disable it.
- **get** - Retrieve details about an Ethernet interface.
- **iterate** - Iterate the Ethernet interfaces.
- **ls** - Iterate the Ethernet interfaces.

- **update** - Update the interface configuration.

```
/> interfaces
```

Name	Address	Subnetmask	MTU	Mbps	Origin	Nameserver(s)	State
lan3			1500	0	Static		Down
lan1	192.168.1.72	255.255.255.0	1500	1000	DHCP	192.168.1.2	Up
lan2			1500	0	Static		Down
lan4	169.254.119.1	255.255.255.0	1500	1000	Static		Up

Description	Configuration
Static Nameserver(s)	
Default Gateway	192.168.1.1

```
/interfaces/>
```

Disable Interface

Remove the interface configuration and disable it.

Example:

```
/interfaces/> disable IFNAME
```

Get Detail

Retrieve details about an Ethernet interface.

Example:

```
/interfaces/> get IFNAME
```

List

Iterate the Ethernet interfaces. Optionally, add the `-l` flag to list the interfaces in long format.

Example:

```
/interfaces/> iterate
/interfaces/> ls
```

Update Ethernet Interface

The update subcommand can be executed in the `interfaces` namespace to update the Ethernet interface settings. For each of the subcommands, the `IFNAME` is required as in the following example:

```
/interfaces/> update --ifname IFNAME ...
```

Alias: `configure`.

DHCP Address

Configure the interface to use DHCP for automatic IP assignment.

Example:

```
/interfaces/> update --ifname IFNAME --dhcp
```

Static IPv4 Address

Sets the IPv4 address and subnet mask of the interface. Do not check for IP address conflicts if the `--force` flag is present. The default netmask is `255.255.255.0`.

Example:

```
/interfaces/> update --ifname IFNAME --ip IP --netmask NETMASK  
/interfaces/> update --ifname IFNAME --ip IP --netmask NETMASK --force
```

Gateway

Sets the IPv4 gateway.

Example:

```
/interfaces/> update --ifname IFNAME --gateway GATEWAY
```

DNS Server

One or more global DNS servers to query first. Set to `[]` or `0.0.0.0` to remove the global nameservers.

Example:

```
/interfaces/> update --nameservers NAMESERVERS [NAMESERVERS ...]
```

MTU Size

The interface MTU size (defaults to 1500).

Example:

```
/interfaces/> update --ifname IFNAME --mtu MTU
```

Namespace "pcie"

The `pcie` namespace can be used to retrieve PCIe related info. The available option is to iterate. Use `-q` to enter the namespace without listing the PCIe switches.

Available Subcommands in "pcie":

- **iterate** - List all the PCIe switches.
- **ls** - List all the PCIe switches.

```
/> pcie
```

Switch: sw1 Health: OK

Port	Port Type	Active Link Width	Maximum Link Width	Current Protocol	Health
sw1_uplink1	Upstream	0	0	PCIe Gen1	OK
sw1_slot2	Downstream	0	0	PCIe Gen1	OK
sw1_slot1	Downstream	0	0	PCIe Gen1	OK
sw1_uplink2	Upstream	0	0	PCIe Gen1	OK
sw1_gpu1	Downstream	0	0	PCIe Gen1	Warning
sw1_gpu2	Downstream	0	0	PCIe Gen1	Warning

Switch: sw2 Health: OK

Port	Port Type	Active Link Width	Maximum Link Width	Current Protocol	Health
sw2_slot4	Downstream	0	0	PCIe Gen1	OK
sw2_slot3	Downstream	0	0	PCIe Gen1	OK
sw2_uplink3	Upstream	0	0	PCIe Gen1	OK
sw2_gpu3	Downstream	0	0	PCIe Gen1	Warning
sw2_gpu4	Downstream	0	0	PCIe Gen1	Warning
sw2_uplink4	Upstream	0	0	PCIe Gen1	OK

```
/pcie/>
```

List

List all the PCIe switches. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/pcie/> iterate
/pcie/> ls
```

Namespace "psus"

The `psus` namespace can be used to retrieve power supply information. Use `-q` to enter the namespace without listing the power supplies.

Available Subcommands in "psus":

- **get** - Retrieve details about a power supply.
- **iterate** - Iterate the power supplies.
- **ls** - Iterate the power supplies.

```
/> psus
```

Name	Model	Line In (Volts)	Output (Watts)	Location	Health
psu1	OSS default	220	800	Power Supply Bay	OK
psu2	OSS default	220	800	Power Supply Bay	OK
psu3	OSS default	220	800	Power Supply Bay	OK
psu4	OSS default	220	800	Power Supply Bay	OK

```
/psus/>
```

Get Detail

Retrieve details about a power supply.

Example:

```
/psus/> get NAME
```

List

Iterate the power supplies. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/psus/> iterate
/psus/> ls
```

Namespace "servicereport"

The `servicereport` namespace can be used to create, delete and list service reports. The service report archive can be used to analyze problems. Use `-q` to enter the `servicereport` namespace without listing the reports.

Available Subcommands in "servicereport":

- **create** - Create a service report that can be used for analyzing U-BMC problems.
- **delete** - Delete a service report.
- **iterate** - Show a list of service reports.
- **ls** - Show a list of service reports.

```
/> servicereport
```

Filename	URL	Size MB
20221201_21:15:19.133208.txz	/svc/20221201_21:15:19.133208.txz	5.67

```
/servicereport/>
```

Create Service Report

Create a service report that can be used for analyzing U-BMC problems.

Example:

```
/servicereport/> create
```

Delete Service Report

Delete a service report.

Example:

```
/servicereport/> delete
```

List

Show a list of service reports.

Example:

```
/servicereport/> iterate  
/servicereport/> ls
```

Namespace "systems"

The `systems` namespace can be used to retrieve system-specific information. Use `-q` to enter the namespace without listing the current configuration.

When no systems are available, the following message is displayed:

```
admin@i-4UP /> systems
No systems available.
```

Available Subcommands in "systems":

- **iterate** - Iterate the systems in this chassis.
- **ls** - Iterate the systems in this chassis.
- **power** - Change the system power to the requested state. The **SYSTEM** argument identifies the system that needs to be changed. Supported actions are: On, ForceOff, GracefulShutdown, GracefulRestart, ForceRestart.

```
/> systems
```

Description	Value
Name	Asrock
Power State	On
Health	OK
Serial Number	To Be Filled By O.E.M.
-- PROCESSORS --	
Available Processors	1
Processor Type	AMD EPYC 7502 32-Core Processor, 3350 Mhz, 32 Core(s), 64 Logical Processor(s)
-- MEMORY --	
DIMM Speed (Mhz)	2933
DIMM Capacity (MiB)	65536
DIMM Manufacturer	Micron Technology
Total Number Of DIMMs	8
Total Memory Capacity (MiB)	524288
-- STORAGE --	
Model	ADATA IM2P32A8-512GCTB5
Serial Number	2M022LAS6GHH
Protocol	NVMe
Capacity (Bytes)	512110190592
Blocksize (Bytes)	512
LifeLeftPercent	100
Failure Predicted	False
Health	OK

```
/systems/>
```

List

Iterate the systems in this chassis. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/systems/> iterate
/systems/> ls
```

Power State

Change the system power to the requested state. The `SYSTEM` argument identifies the system that needs to be changed. Supported `ACTIONS` are `ForceOff`, `ForceRestart`, `GracefulRestart`, `GracefulShutdown`, and `On`.

Example:

```
/systems/> power --system SYSTEM --action ACTION
```

Namespace "terminal"

The `terminal` namespace can be used to change the `terminal colors`, and `terminal type`. Use `-q` to enter the namespace without listing the current `terminal` settings.

Available Subcommands in "terminal":

- **basic_ansi** - Change the terminal settings to use only basic ANSI output.
- **basic_xterm** - Change terminal settings to show tables using standard XTerm colors.
- **full_color** - Change terminal settings to show tables using 256 colors.
- **ls** - Show the terminal related settings.
- **save** - Persist the active terminal settings for this user. When the terminal connection (serial) does not allow the saved settings, the terminal will fall back to basic output.
- **show_settings** - Show the terminal related settings.
- **table_alt_color** - Set the alternating table row color. The default value is `WHITE`.

```
/> terminal
```

Description	Value
Colors Enabled	True
Basic ANSI output	False
Alternating table background color	WHITE

```
/terminal/>
```

Basic ANSI

Change the terminal settings to use only basic ANSI output.

Example:

```
/terminal/> basic_ansi
```

Basic xterm

Change terminal settings to show tables using standard XTerm colors.

Example:

```
/terminal/> basic_xterm
```

Full Color

Change terminal settings to show tables using 256 colors.

Example:

```
/terminal/> full_color
```

List

Show the terminal related settings.

Example:

```
/terminal/> ls  
/terminal/> show_settings
```

Save

Persist the active terminal settings for this user. When the terminal connection (serial) does not allow the saved settings, the terminal will fall back to basic output.

Example:

```
/terminal/> save
```

Table Alt Color

Set the alternating table row color. The default value is WHITE.

Example:

```
/terminal/> table_alt_color --color COLOR
```

Namespace "thermals"

The `thermals` namespace can be used to manage thermal sensors. Use `-q` to enter the namespace without listing the sensors.

Available Subcommands in "thermals":

- **get** - Retrieve details about a thermal sensor.
- **iterate** - Iterate the thermal sensors.
- **ls** - Iterate the thermal sensors.

In the table below, NC stands for non-critical threshold for the temperature sensor.

```
/> thermals
```

Name	Lower NC	Upper NC	Physical Context	Temp (C)	Health
CPU Temp	5	93	Systemboard	94	Warning
Card Side Temp	5	68	Systemboard	27	OK
MB Temp	5	55	Systemboard	22	OK
Onboard LAN Temp	5	103	Systemboard	37	OK
PSU backplane-temp	5	45	PSU backplane	30	OK
PSU1 TEMP	5	50	Systemboard	14	OK
PSU2 TEMP	5	50	Systemboard	14	OK
TEMP_CPU1_DDR4A	5	84	Systemboard	32	OK
TEMP_CPU1_DDR4B	5	84	Systemboard	32	OK
TEMP_CPU1_DDR4C	5	84	Systemboard	32	OK
TEMP_CPU1_DDR4D	5	84	Systemboard	31	OK
TEMP_CPU1_DDR4E	5	84	Systemboard	31	OK
TEMP_CPU1_DDR4F	5	84	Systemboard	32	OK
TEMP_CPU1_DDR4G	5	84	Systemboard	31	OK
TEMP_CPU1_DDR4H	5	84	Systemboard	31	OK
U-BMC CPU	5	85	Armada processor	46	OK
midplane-gpu1_temp	5	85	midplane	20	OK
midplane-gpu2_temp	5	85	midplane	20	OK
midplane-gpu3_temp	5	85	midplane	20	OK
midplane-gpu4_temp	5	85	midplane	20	OK
midplane-sw1_temp	5	85	midplane	20	OK
midplane-sw2_temp	5	85	midplane	20	OK
midplane-temp1	5	80	midplane	30	OK
midplane-temp2	5	80	midplane	30	OK

```
/thermals/>
```

Get Detail

Retrieve details about a thermal sensor.

Example:

```
/thermals/> get NAME
```

List

Iterate the thermal sensors. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/thermals/> iterate
/thermals/> ls
```

Namespace "users"

The `users` namespace can be used to retrieve, create, and modify user accounts. Use `-q` to enter the namespace without listing the `users`.

Available Subcommands in "users":

- **add** - Create a new user account. The administrator role is required for this command.
- **create** - Create a new user account. The administrator role is required for this command.
- **delete** - Delete a user account. The administrator role is required for this command.
- **iterate** - Iterate user accounts.
- **ls** - Iterate user accounts.
- **update** - Update a user and change the role or password or rename the user.

```
/> users
```

Username	UID	Description	Role	Locked
admin	1001	Administrator account	Administrator	False
oper	1002	Operator account	Operator	False

```
/users/>
```

Add User

Create a new user account. The administrator role is required for this command. The `ROLE` argument can take a value of `User`, `Operator`, or `Administrator`. The `USERNAME` argument must meet the following requirements:

- The username must be at least two characters long.

- The username must not exceed 30 characters.
- The characters A-Z, a-z, digits 0-9, and the special characters underscore (`_`), period (`.`), and space `-` are allowed.

The `PASSWORD` argument used when creating the user must meet the complexity requirements:

- A valid password must be at eight characters long
- A valid password must contain at least one digit

Alias: `create`

Example:

```
/users/> add --user USERNAME --password PASSWORD --role ROLE
```

Delete User

Delete a user account. The administrator role is required for this command. You must have at least one administrator user; removing the last administrator will not be allowed.

Example:

```
/users/> delete NAME
```

List

Iterate user accounts. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/users/> iterate  
/users/> ls
```

Update User

Update a user to change the role, change the password, or rename the user. The administrator role is required for these subcommands.

Role Change

The `ROLE` argument is used to change the role of user and can be one of `User`, `Operator`, or `Administrator`. The `NAME` argument is the user that will be changed. You must have at least one administrator user, and removing the last administrator will not be allowed.

Example:

```
/users/> update NAME --role ROLE
```

Password Change

The `PASSWORD` argument is used to change the password of the user. The `NAME` argument is the user that will be changed.

Example:

```
/users/> update NAME --password PASSWORD
```

Rename User

The `NAME` argument is the user that will be changed. The `RENAME` argument is used to rename the user.

Example:

```
/users/> update NAME --rename RENAME
```

Namespace "voltages"

The `voltages` namespace can be used to retrieve voltage sensor information. Use `-q` to enter the namespace without listing the voltage sensors.

Available Subcommands in "voltages":

- **get** - Retrieve details about a sensor.
- **iterate** - Iterate the voltage sensors.
- **ls** - Iterate the voltage sensors.

```
/> voltages
```

Name	Physical Context	Lower NC	Upper NC	Reading (Volts)	Health
1.8V	Systemboard	N/A	N/A	1.83	OK
1.8VSB	Systemboard	N/A	N/A	1.8	OK
12V	Systemboard	N/A	N/A	12	OK
3V	Systemboard	N/A	N/A	3.34	OK
3VSB	Systemboard	N/A	N/A	3.38	OK
5V	Systemboard	N/A	N/A	5.1	OK
5VSB	Systemboard	N/A	N/A	5.1	OK
BAT	Systemboard	N/A	N/A	2.6	Critical
LAN_0.83V	Systemboard	N/A	N/A	0.83	OK
VCCM ABCD	Systemboard	N/A	N/A	1.21	OK
VCCM EFGH	Systemboard	N/A	N/A	1.22	OK
VCPU	Systemboard	N/A	N/A	1.06	OK

VPPM ABCD	Systemboard	N/A	N/A	2.58	OK
VPPM EFGH	Systemboard	N/A	N/A	2.58	OK
VSOC	Systemboard	N/A	N/A	0.89	OK
psu1_vin	psu1	110.0	240.0	220.0	OK
psu1_vout	psu1	11.4	12.6	12.0	OK
psu2_vin	psu2	110.0	240.0	220.0	OK
psu2_vout	psu2	51.2	56.8	54.0	OK
psu3_vin	psu3	110.0	240.0	220.0	OK
psu3_vout	psu3	11.4	12.6	12.0	OK
psu4_vin	psu4	110.0	240.0	220.0	OK
psu4_vout	psu4	51.2	56.8	54.0	OK
v12v_standby	PSU backplane	11.4	12.6	12.0	OK
v1v8_standby	PSU backplane	1.71	1.89	1.8	OK
v3v3_standby	PSU backplane	3.1	3.5	3.3	OK
v5v_standby	PSU backplane	4.7	5.3	5.0	OK
vin-v0v9	midplane	11.4	12.6	12.0	OK
vin-v1v8	midplane	11.4	12.6	12.0	OK
vin-v3v3	midplane	11.4	12.6	12.0	OK
vout-v0v9	midplane	0.86	0.95	0.9	OK
vout-v1v8	midplane	1.71	1.89	1.8	OK
vout-v3v3	midplane	3.1	3.5	3.3	OK

```
/voltages/>
```

Get Details

Retrieve details about a sensor.

Example:

```
/voltages/> get NAME
```

List

Iterate the voltage sensors. Optionally, use the `-l` flag to output a table showing full details.

Example:

```
/voltages/> iterate
/voltages/> ls
```

Managing the system with the OSS U-BMC Redfish API

The OSS U-BMC Redfish API is a ReSTful API that provides a standard interface for managing the system. The API is based on the Redfish specification, which is an open industry standard for managing data center infrastructure. The Redfish standard is maintained by the DMTF (Distributed Management Task Force), located at <http://www.dmtf.org>.

The OSS U-BMC implementation of this API provides endpoints for the following Redfish resources:

- Accounts
- Chassis
- EventDestination
- EventService
- Managers
- PCISwitches
- Roles
- Sessions
- Systems
- UpdateService

The API is available on port 443 of the U-BMC and is secured using the same username and password as the CLI and GUI. The API is available at <https://UBMC-HOST/redfish/v1/>.

The API documentation is available in HTML format and can be viewed in a web browser. The documentation web page is rendered using the Swagger UI. The API documentation is available at <https://UBMC-HOST/documentation/api> and uses the same username and password as the CLI and GUI.

The documentation is also available in JSON format and can be used to generate client libraries for other programming languages. The JSON documentation is available at <https://UBMC-HOST/swagger.json>.

CAUTION: If you are using a shared computer, make sure to log out of the API when you are done by clearing your browser's basic authentication storage. You will need to clear the password cache manually using the advanced settings in your browser. In Chrome and Edge browsers, this is done by pressing **Ctrl+Shift+Delete** and selecting the options to **Clear passwords and other sign-in data** and time range **All time**. In the Firefox browser, this is done by pressing **Ctrl+Shift+Delete** and selecting the options to clear **Active logins** and time range **Everything**. Your password will be erased from the browser's cache, and you will need to re-enter it the next time you access the API at <https://UBMC-HOST/documentation/api>.

Managing the system with the OSS U-BMC Intelligent Platform Management Interface (IPMI)

Intelligent Platform Management Interface (IPMI) is a method of remote management. OSS provides some commands using this interface to control and monitor the U-BMC.

IPMI Commands

When executing IPMI commands, you will need to provide the IP address of the U-BMC, the username and password. The username and password are the same as the ones used to log into the U-BMC.

The IPMI commands are executed using the `ipmitool` command. The `ipmitool` command is available on most Linux distributions. If you are using a Windows machine, you can download the `ipmitool` source code and compile it for Windows. The `ipmitool` source code is available at <https://github.com/ipmitool/ipmitool>.

The following sections describe commands available for use with IPMI.

power status

Check the power status of the server.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS power status
Chassis Power is on
```

power on

Turn on the server.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS power on
```

power off

Turn off the server.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS power off
```

power cycle

Turn off the server and then turn it back on.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS power cycle
```

power reset

Reset the server.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS power reset
```

power soft

Soft reset the server.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS power soft
```

sdr

Display sensor data records.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS sdr
gpu-fan1      | 7300 RPM      | ok
gpu-fan1r     | 7300 RPM      | ok
...
```

sensor

Display sensor data.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS sensor
gpu-fan1 | 7300.000 | RPM | ok | 800.000 | 1100.000 |
1400.000 | na      | na   | na
```

lan print

Display LAN configuration parameters.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS lan print
IP Address Source      : DHCP Address
IP Address             : 192.168.1.236
Subnet Mask            : 255.255.255.0
MAC Address            : 00:05:25:72:00:30
...
```

lan print 2

Display LAN configuration parameters for interface 2.

Example:

```
ipmitool -U USERNAME -P PASSWORD -H UBMC_ADDRESS lan print 2
IP Address Source      : Static Address
IP Address             : 10.119.119.1
Subnet Mask            : 255.255.255.0
MAC Address            : 00:05:25:72:00:31
```

Glossary

The following terms are used throughout this document and used throughout the U-BMC software products.

ACPI - Advanced Configuration and Power Interface

API - Application Programming Interface

BIOS - Basic Input/Output System

BMC - Baseboard Management Controller

Chassis - A physical chassis that contains a system.

CLI - Command Line Interface

Computer System - A physical computer system.

DHCP - Dynamic Host Configuration Protocol

DNS - Domain Name System

FTP - File Transfer Protocol

FQDN - Fully Qualified Domain Name

GPU - Graphics Processing Unit

GUI - Graphical User Interface

HTTP - Hypertext Transfer Protocol

HTTPS - Hypertext Transfer Protocol Secure

IP - Internet Protocol

IP Address - A unique address assigned to a device on a network.

IPMI - Intelligent Platform Management Interface

IPMITool - A command line utility for IPMI.

LAN - Local Area Network

LAN Interface - A network interface that is used to connect to a LAN.

LED - Light Emitting Diode
MAC Address - A unique address assigned to a network interface.
NIC - Network Interface Card
NTP - Network Time Protocol
OS - Operating System
OSS - One Stop Systems, Inc.
PCIe - Peripheral Component Interconnect Express
PCIe Port - A physical port on a PCIe switch.
PCIe Switch - A device that connects multiple PCIe devices together.
PSU - Power Supply Unit; A device that supplies power to a system.
Redfish - An open industry standard for managing data center infrastructure.
Redfish API - An API that uses the Redfish protocol.
SDR - Sensor Data Record
Sensor - A device that measures a physical quantity and converts it to an electrical signal.
Serial Port - A physical port that is used to connect to a serial device.
SMTP - Simple Mail Transfer Protocol
SSH - Secure Shell
U-BMC - OSS Unified Baseboard Management Controller
URI - Uniform Resource Identifier
USB - Universal Serial Bus
UUID - Universally Unique Identifier
Web Browser - A program that is used to access web pages.